



Blériot





1 / 4 s c a l e R C





P H O T O M A N U A L






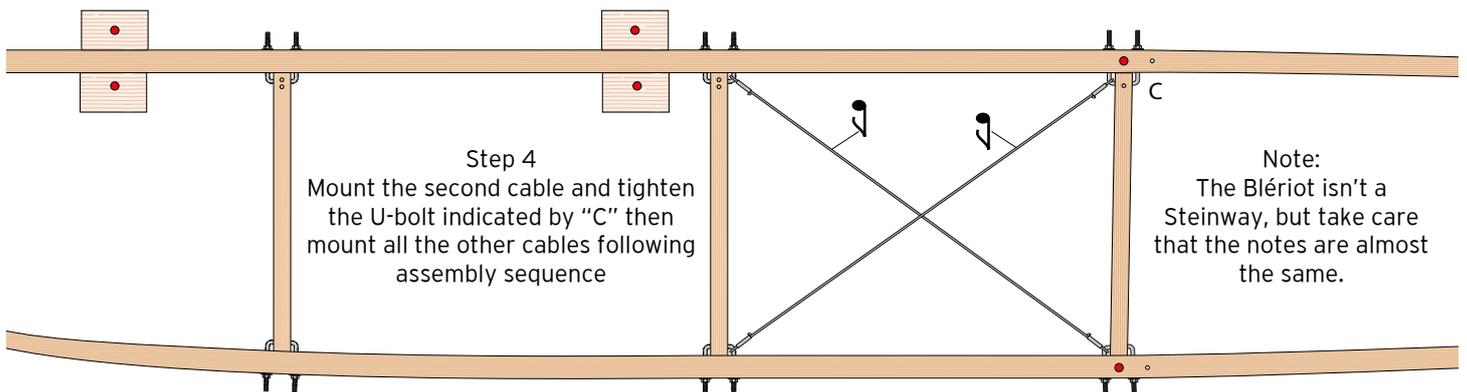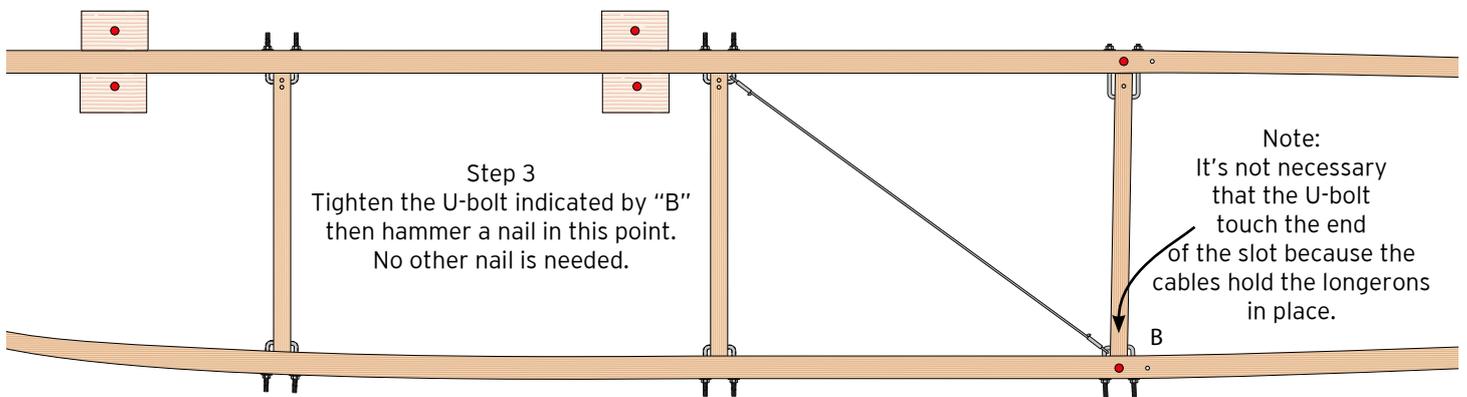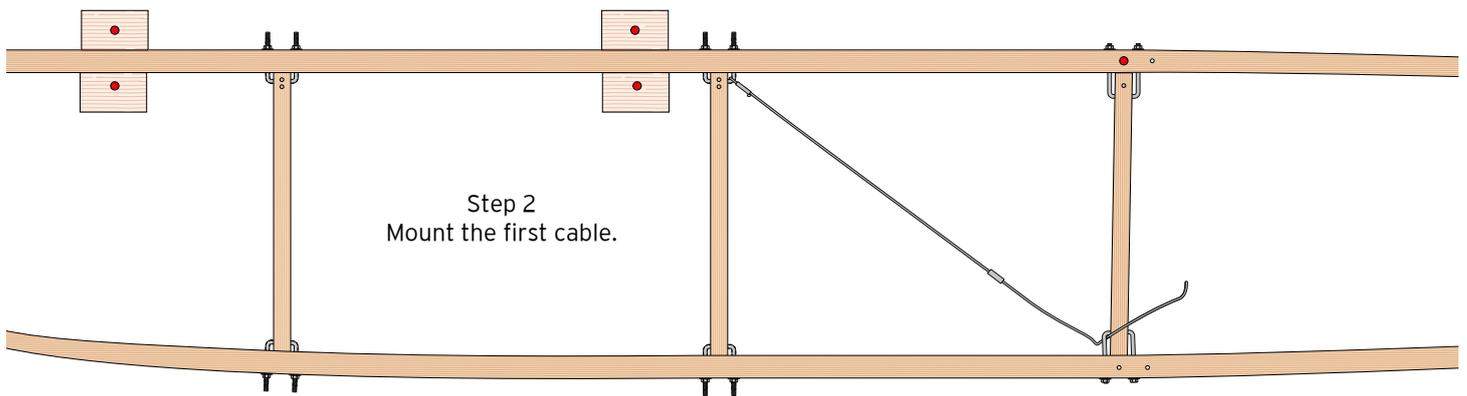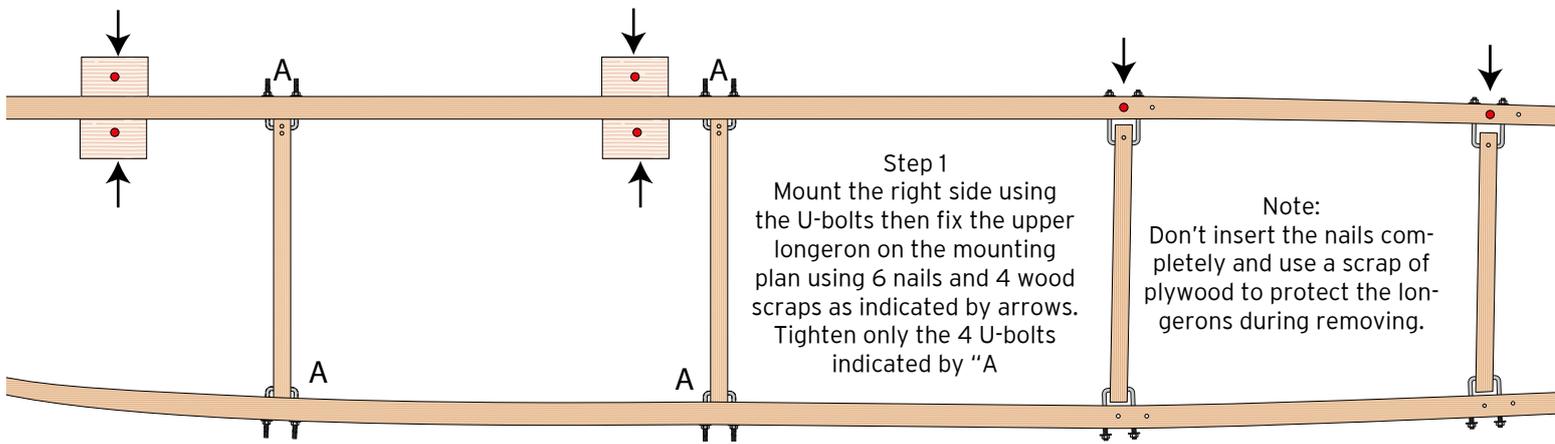


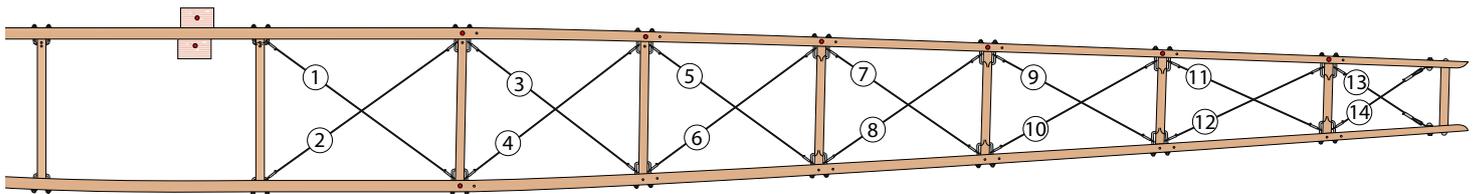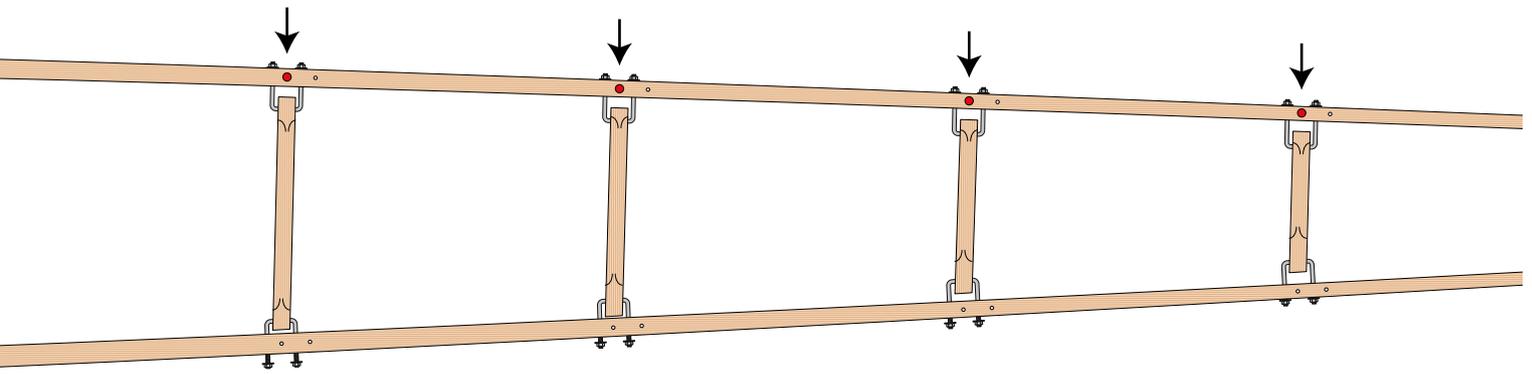


Assembly sequence of the cables


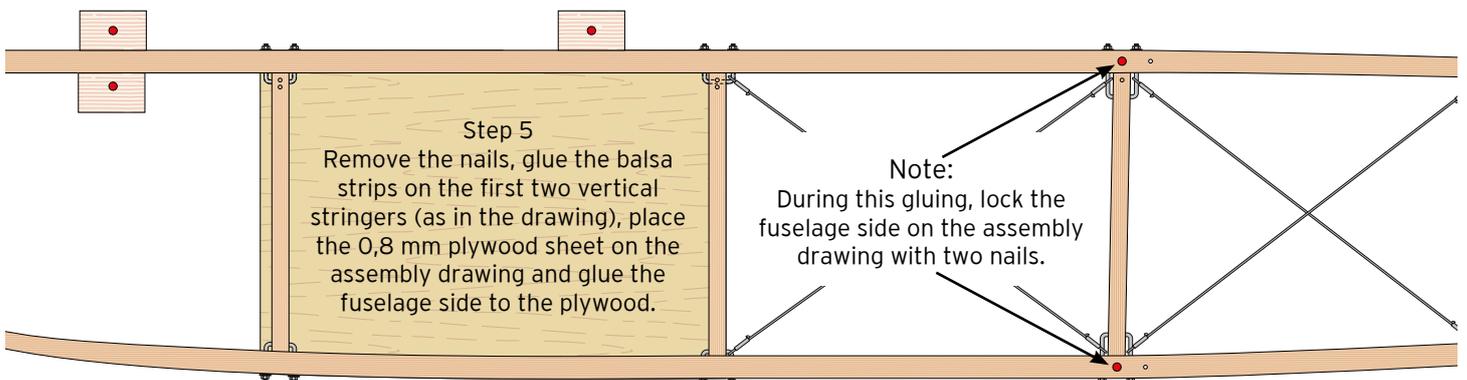



Step 6
Build this second fuselage side over the first. Follow the same procedure of the right side, using the nails in the same points.

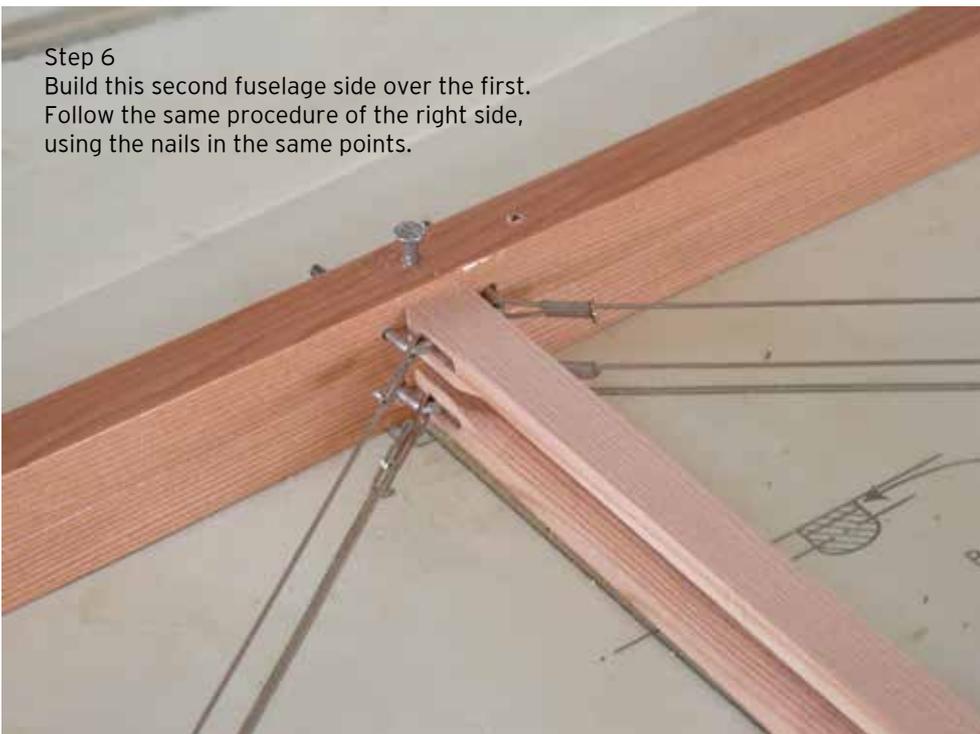




Suggestion:
Paint the longerons and stringers before mounting with a soft brush, apply one coat of clear sealer, sand lightly and apply one coat of protective varnish.
Do not paint the faces where plywood sheeting is glued on later.


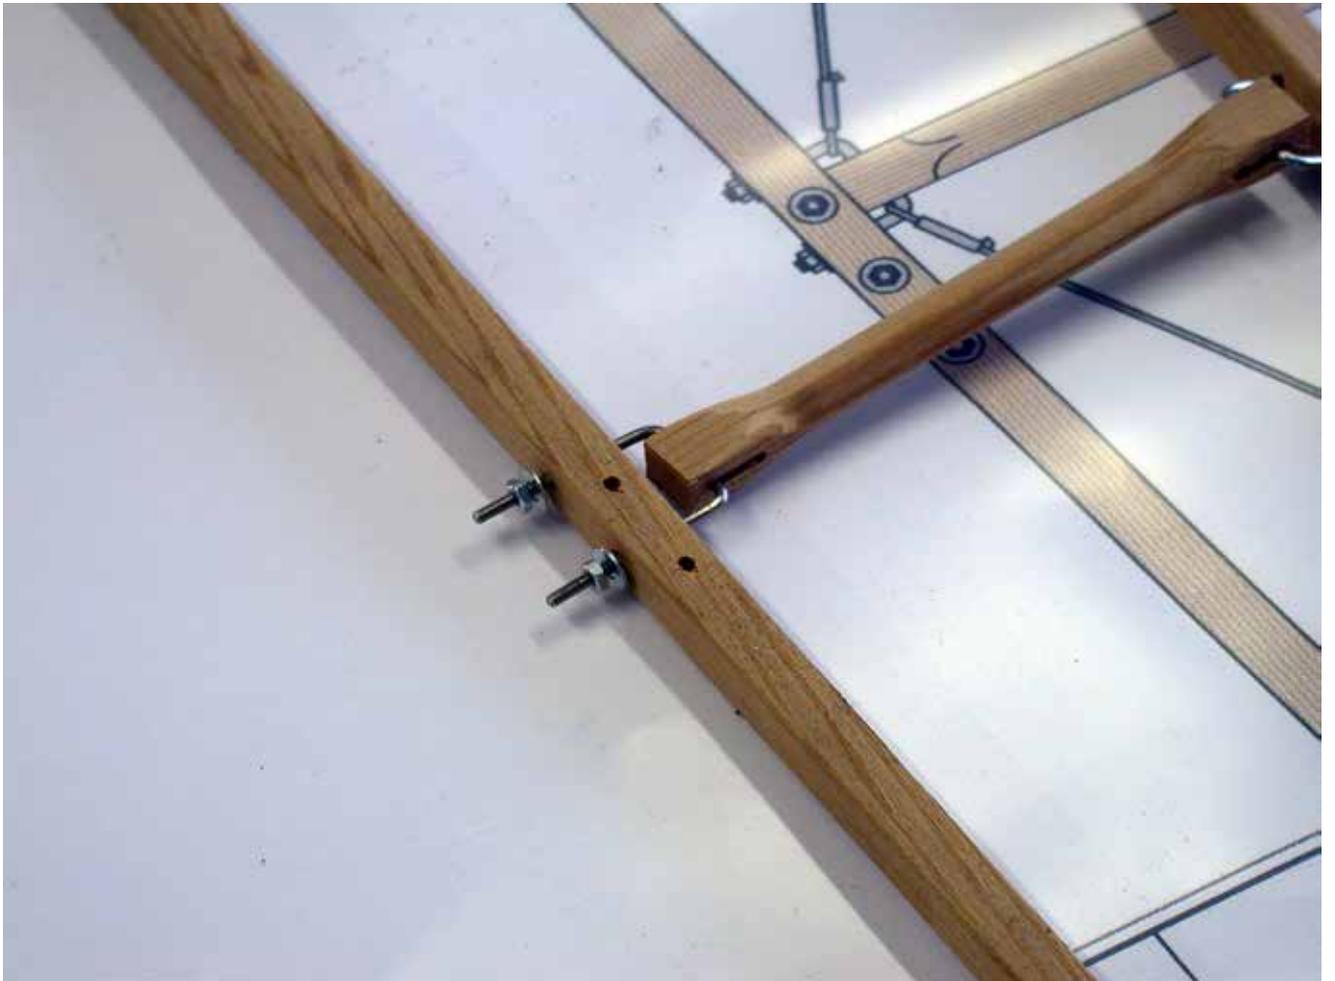


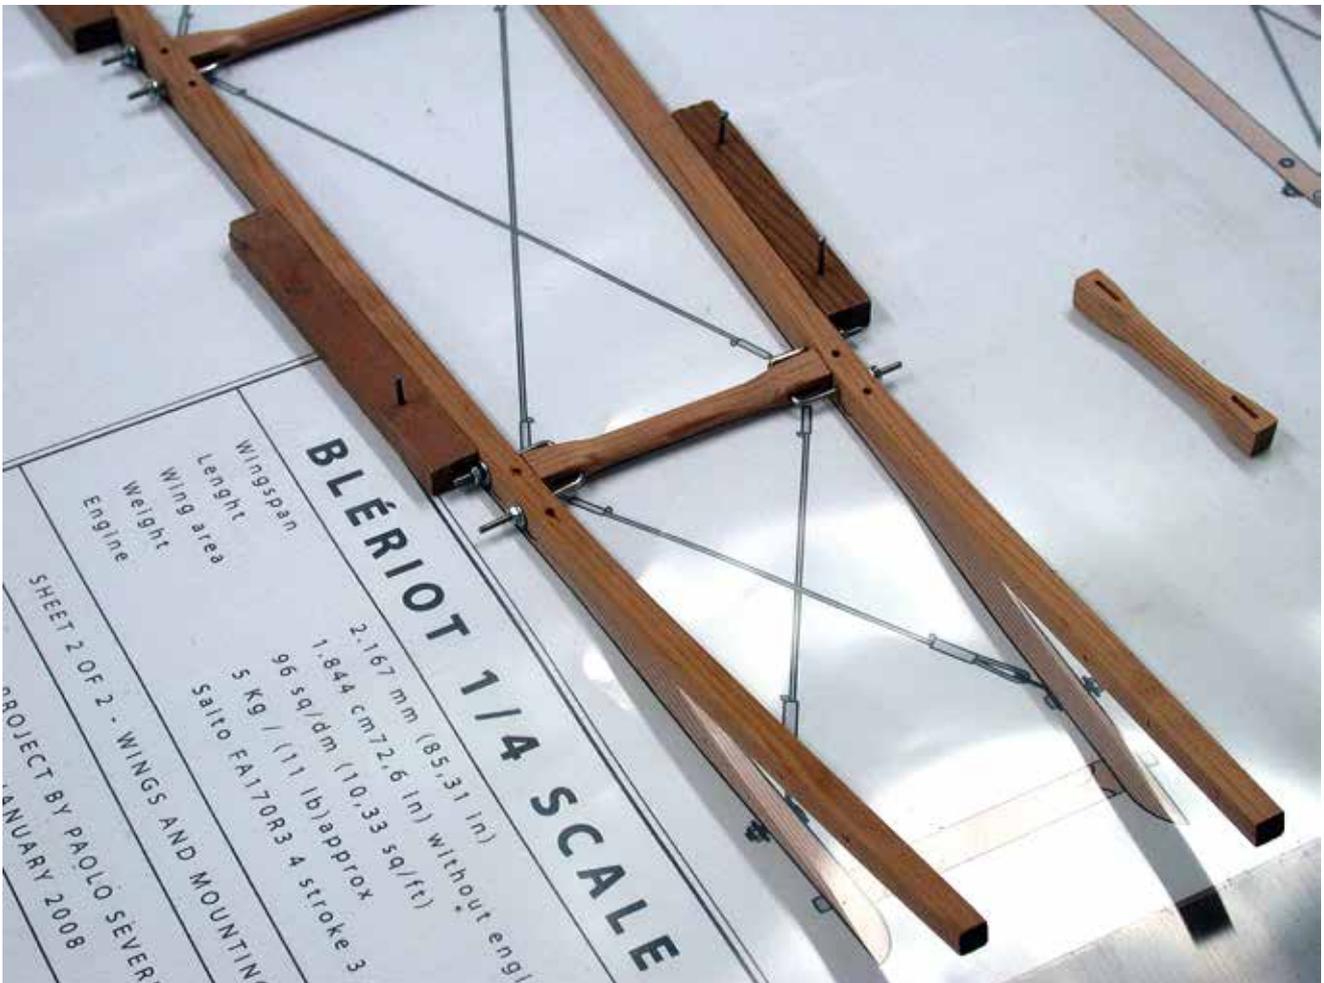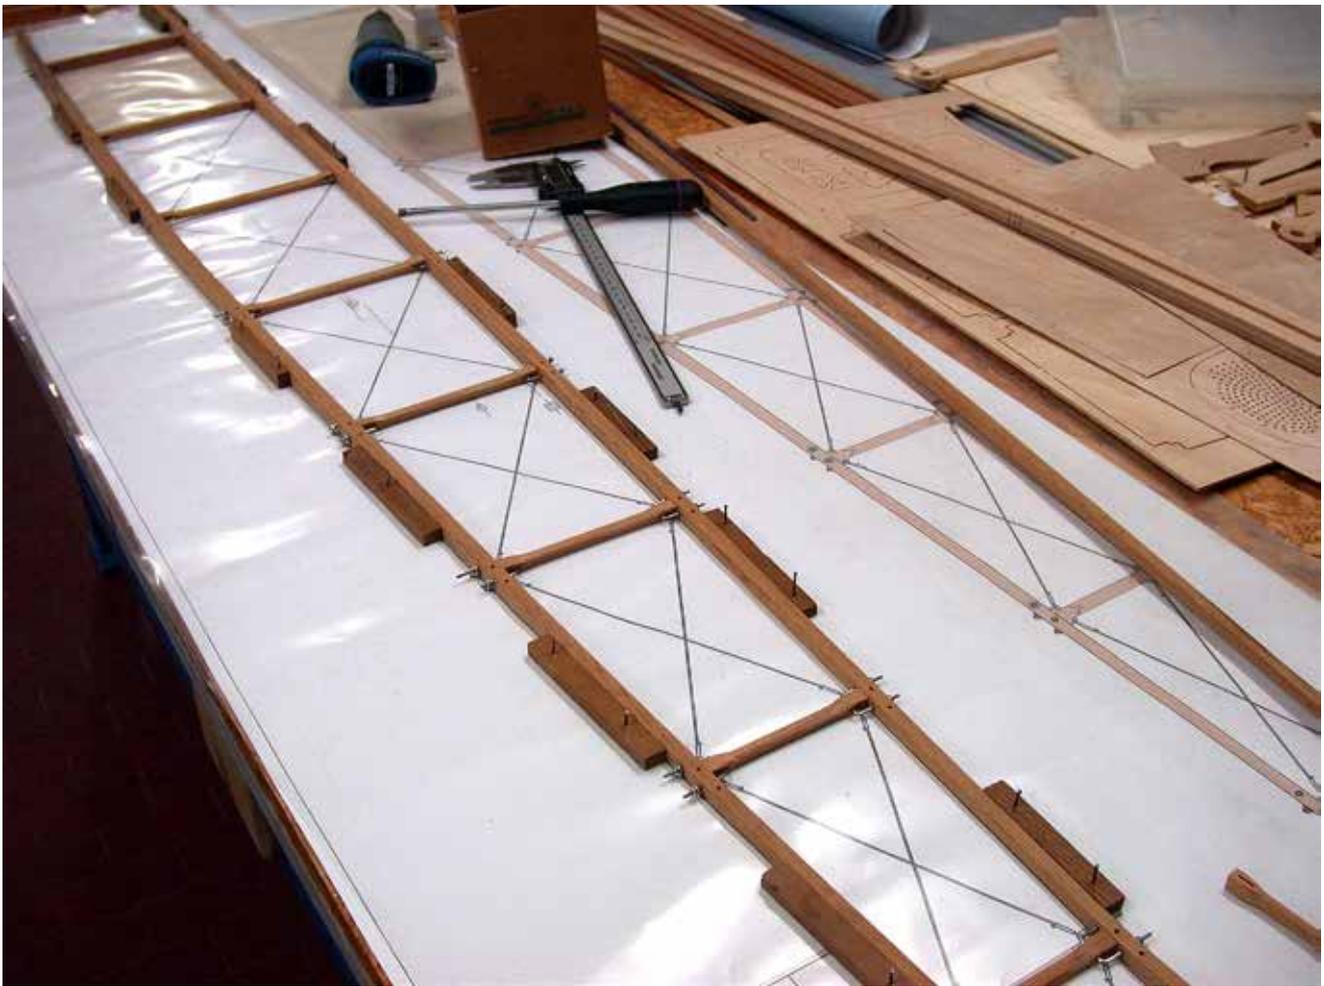

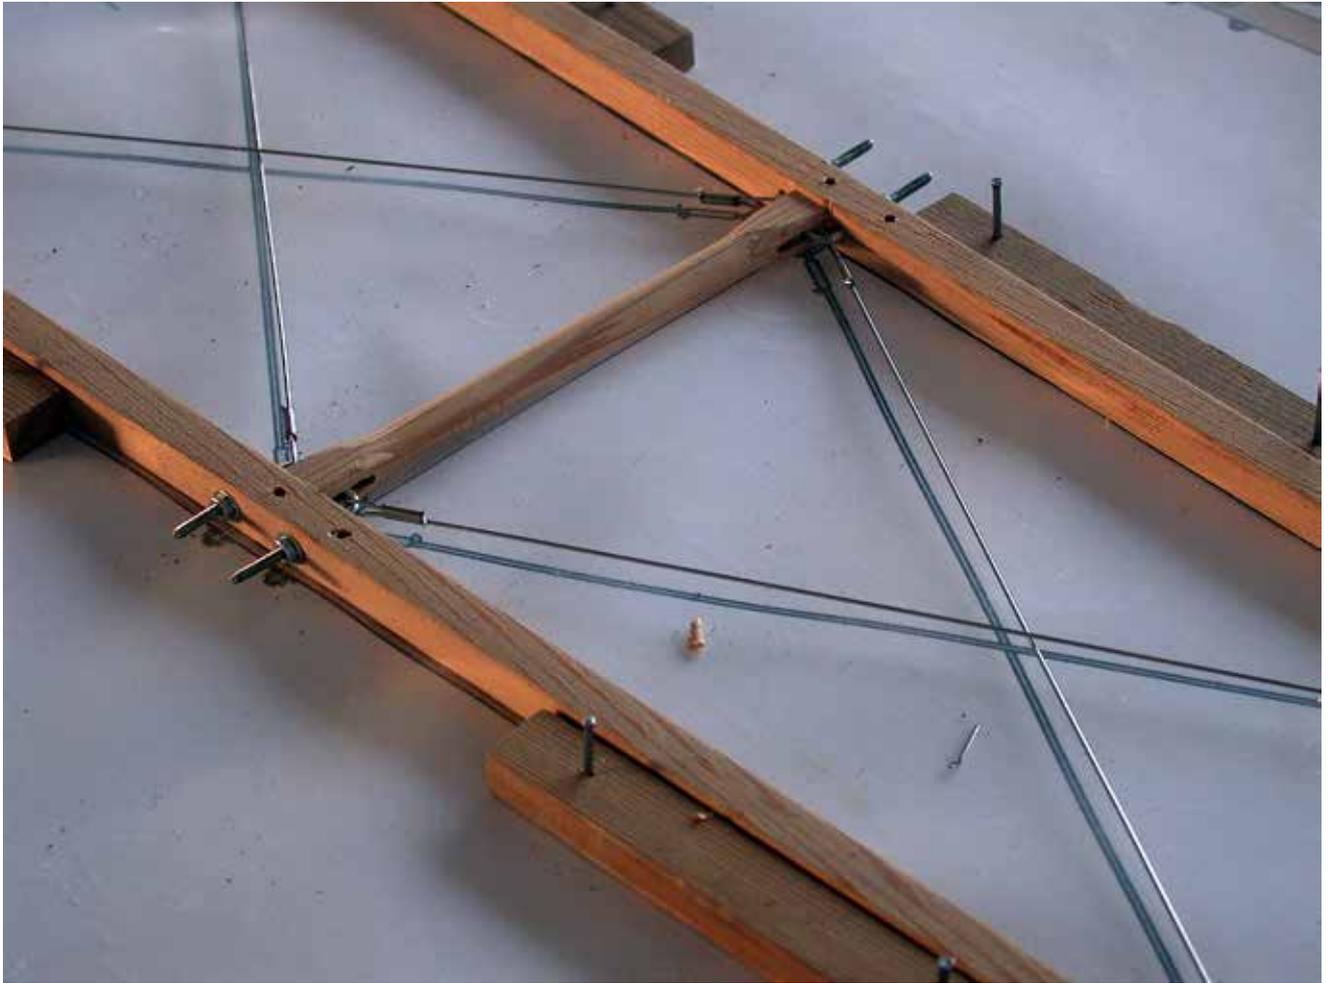


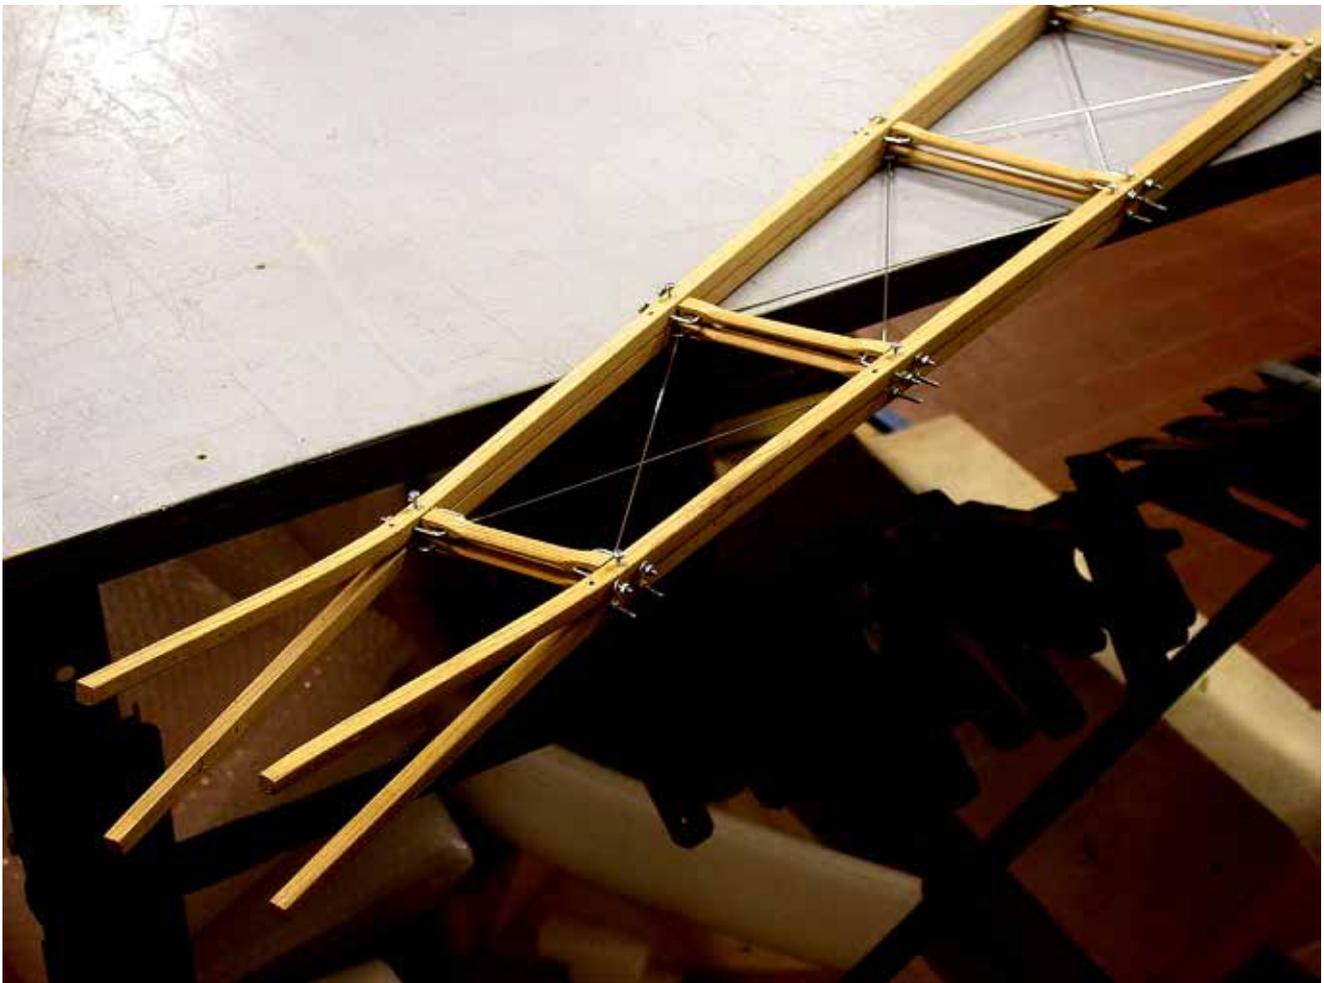


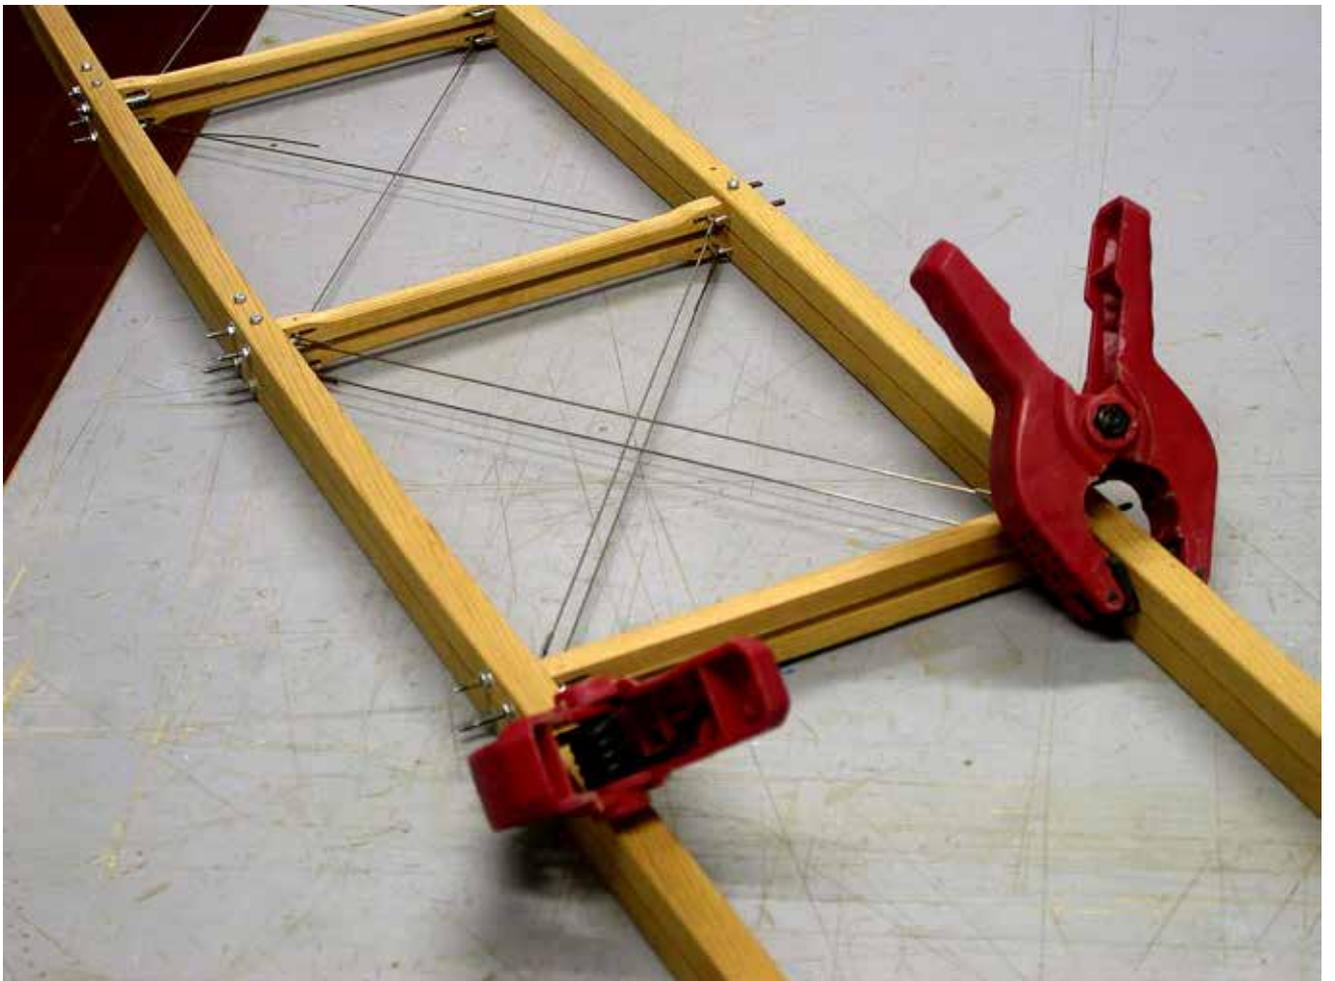
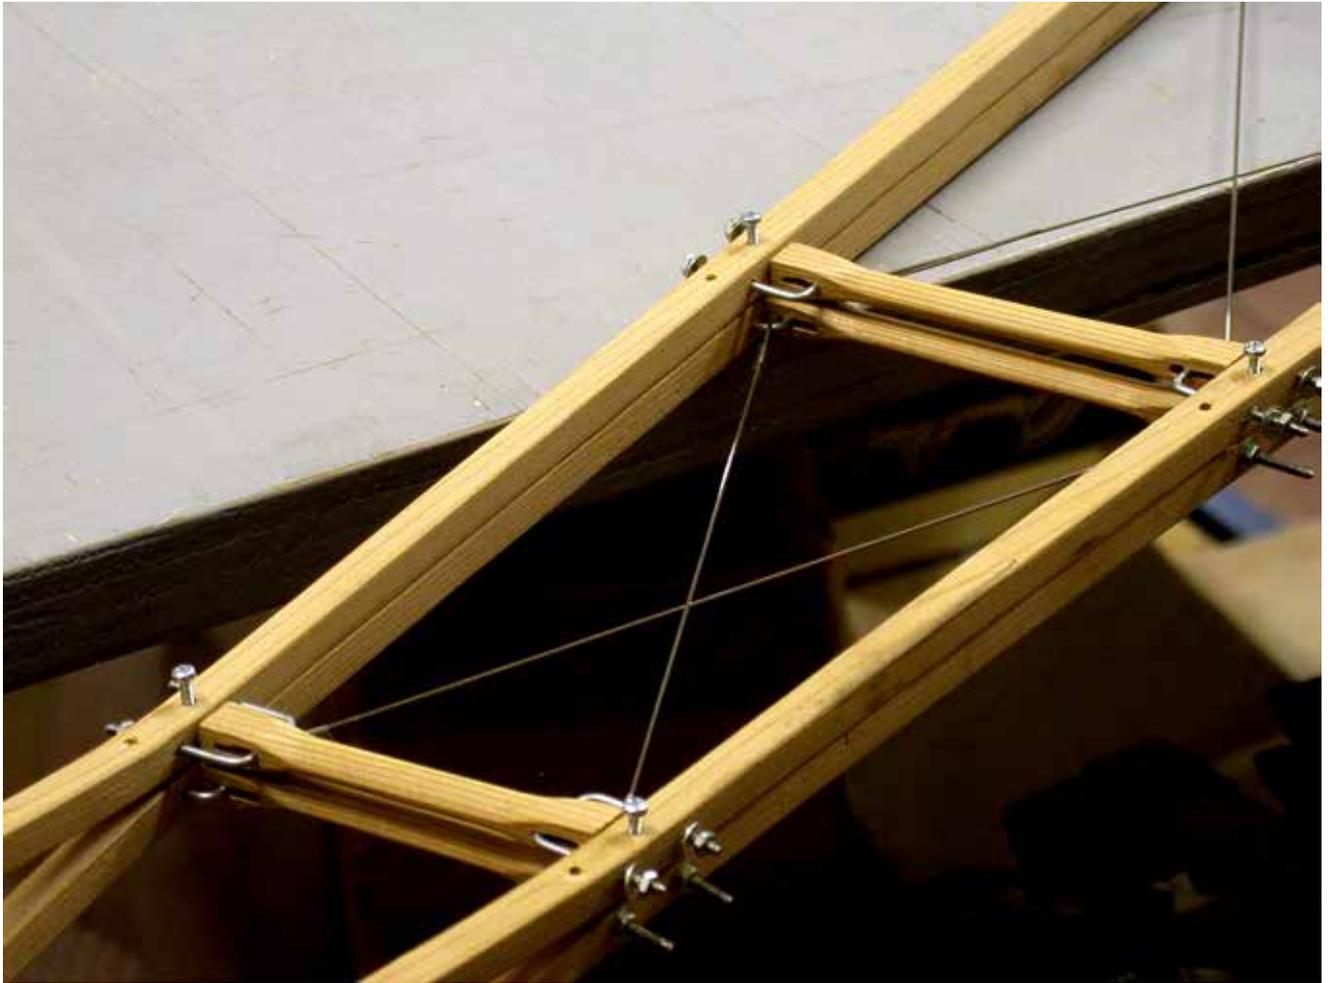


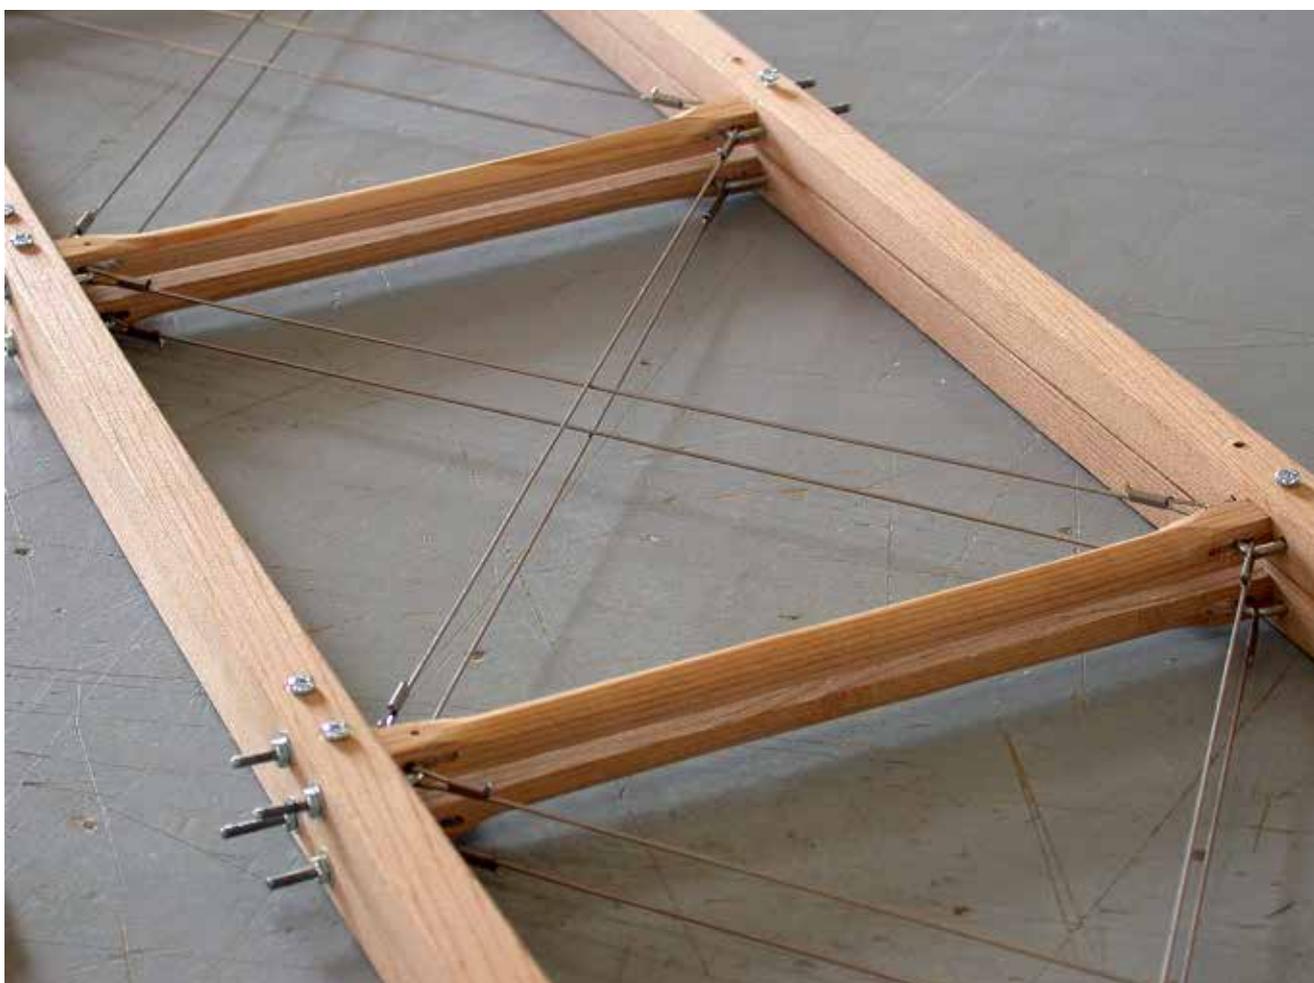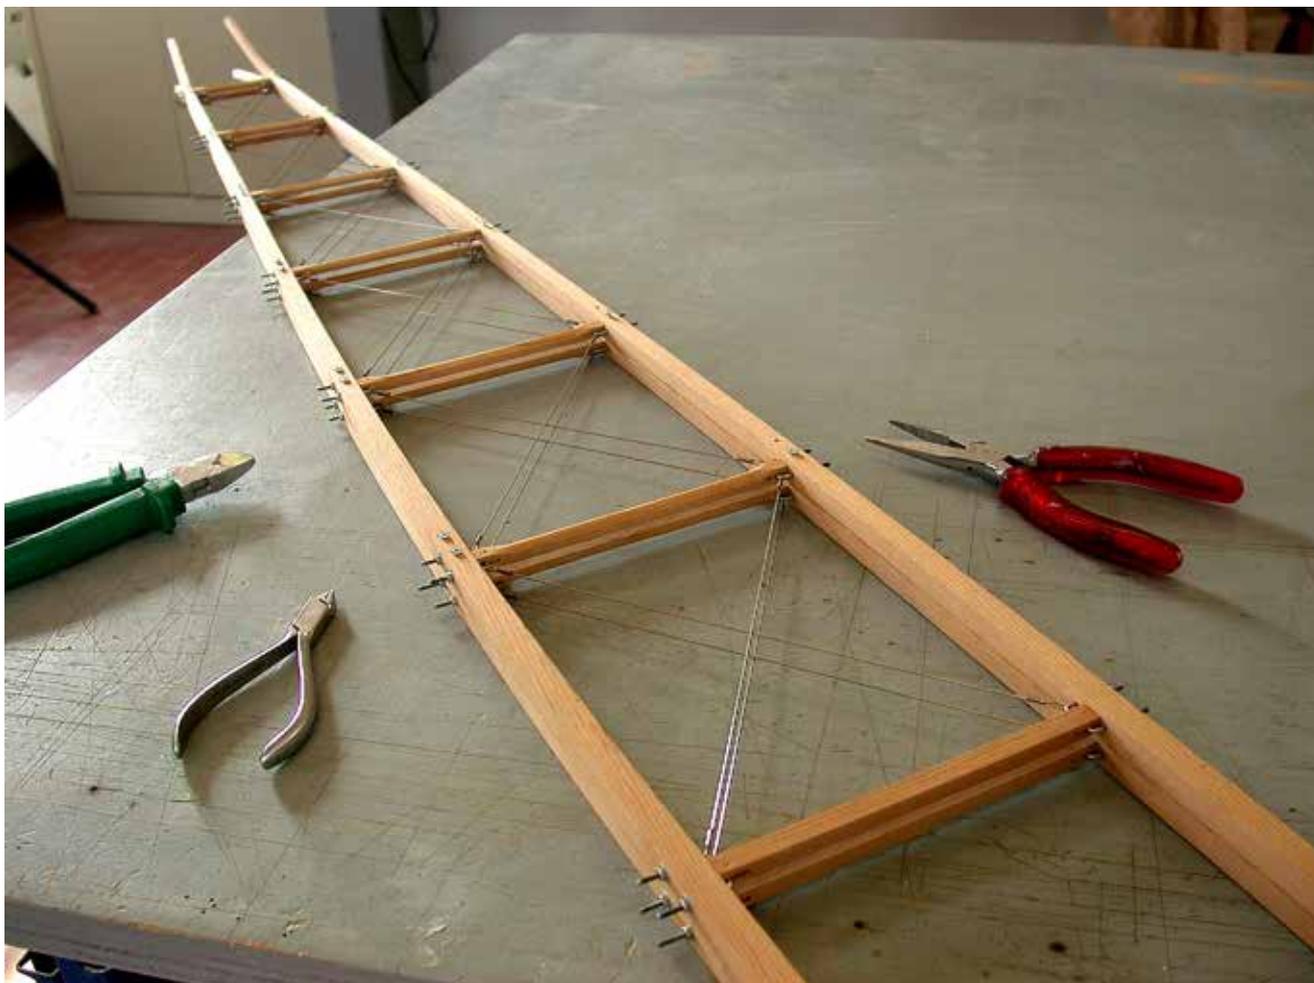




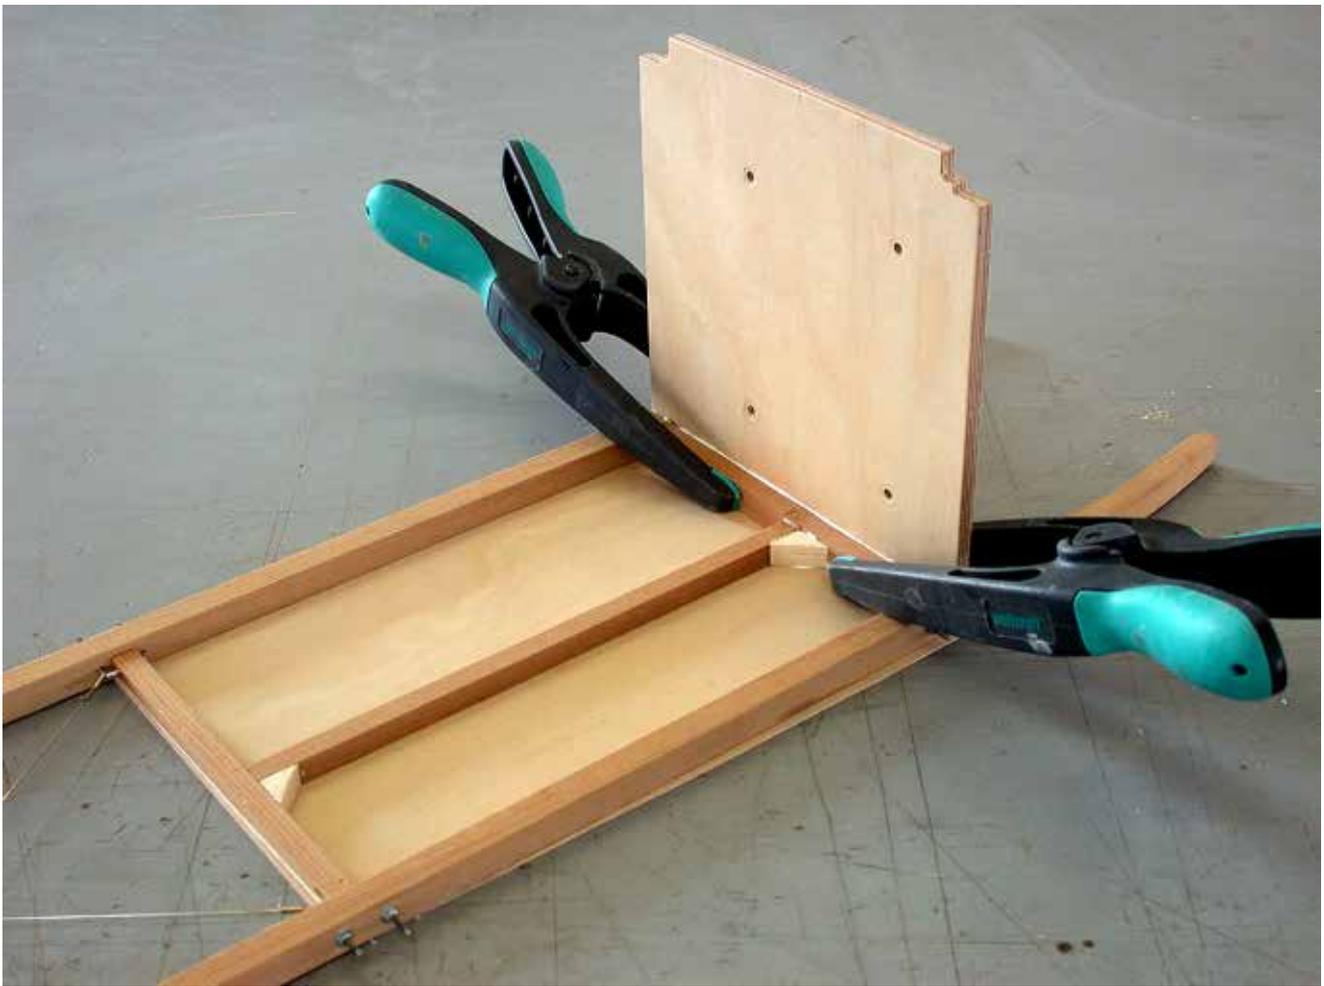



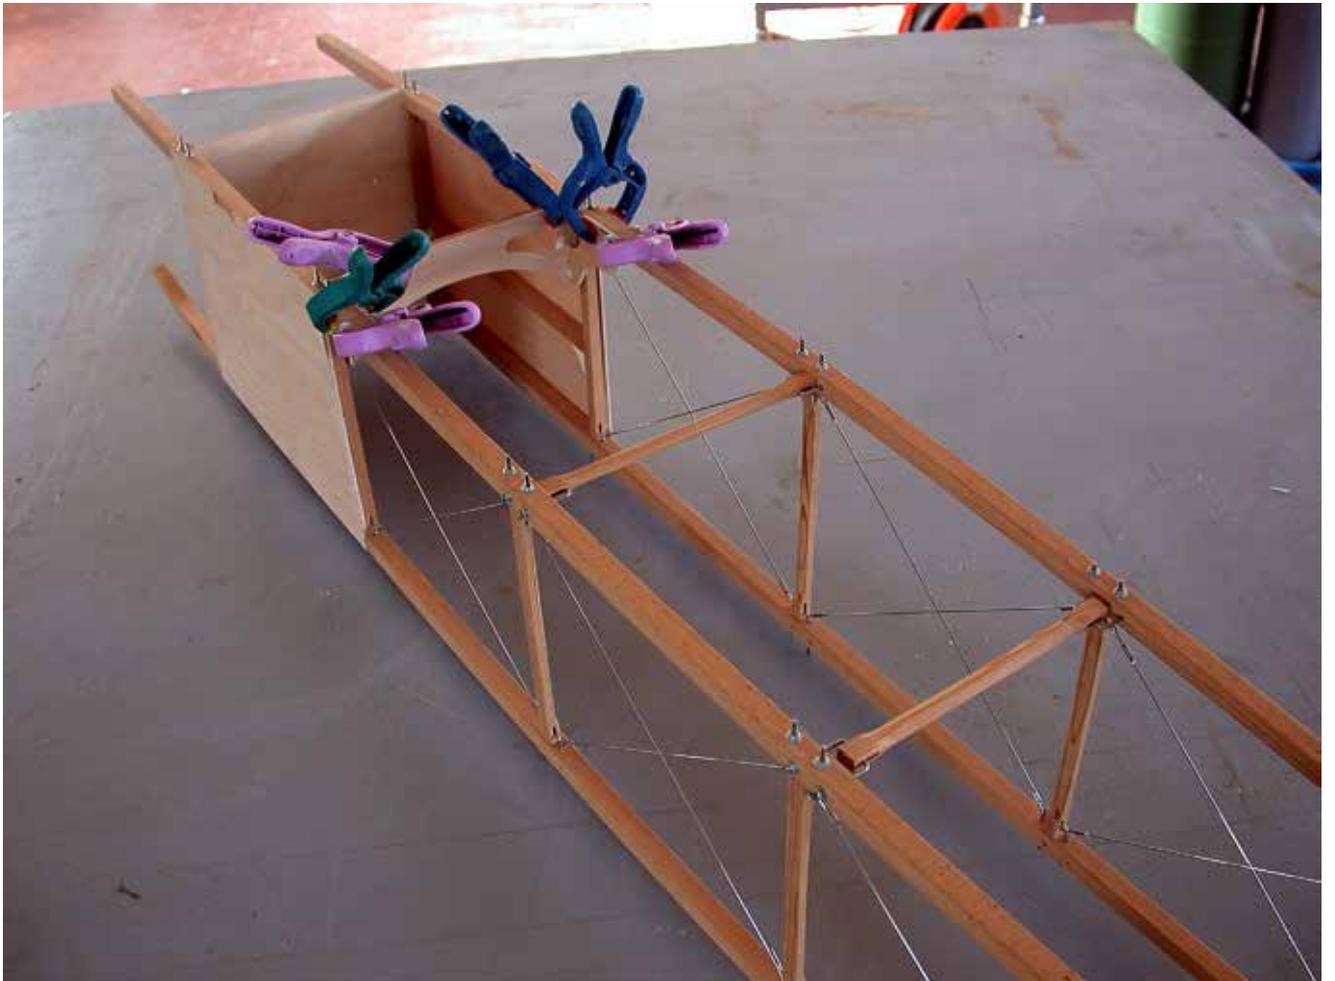


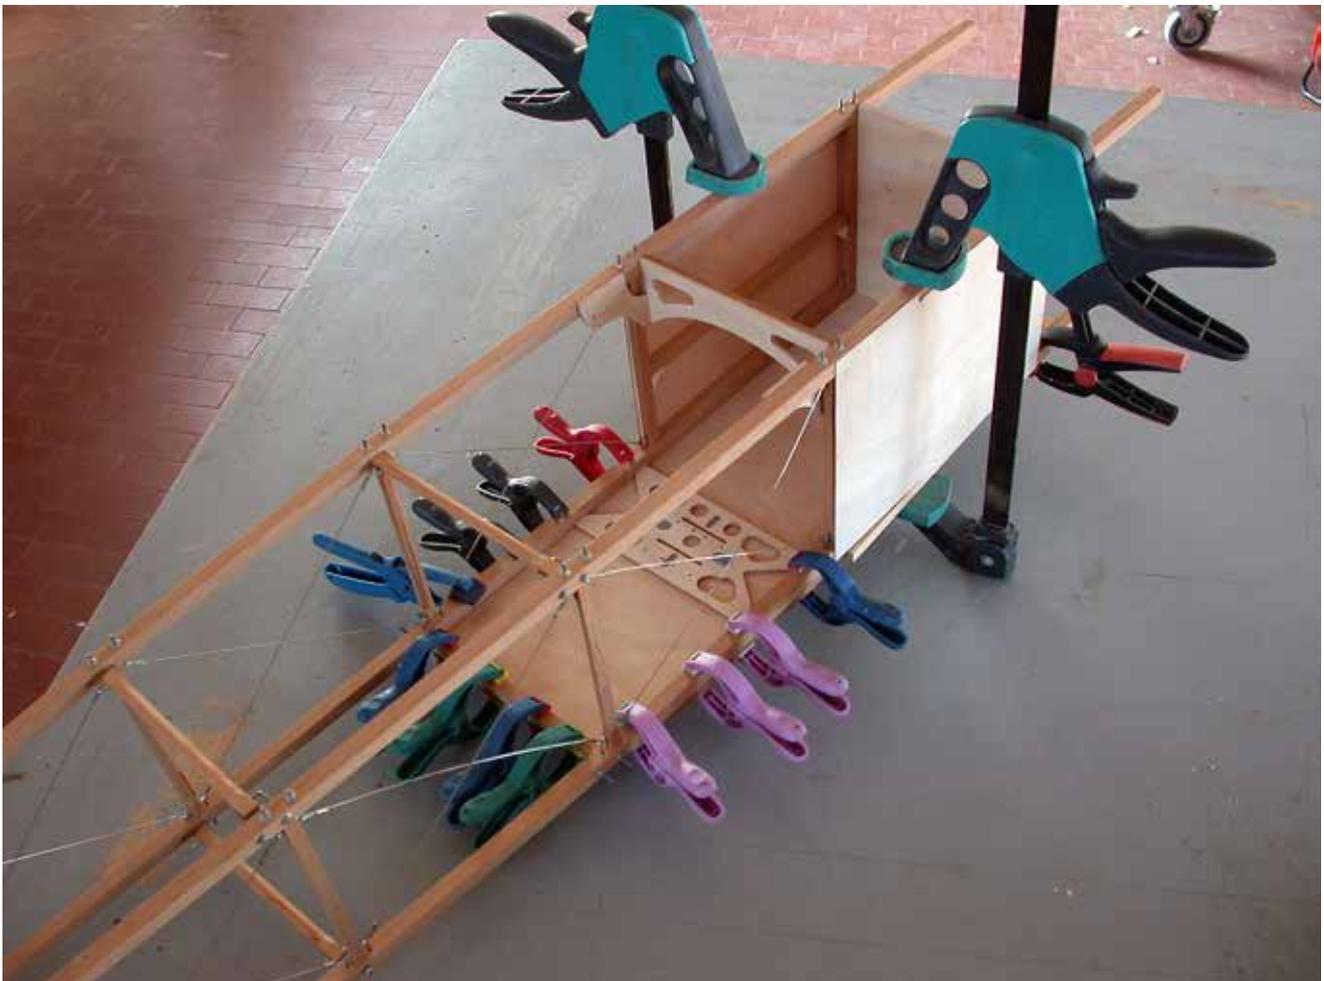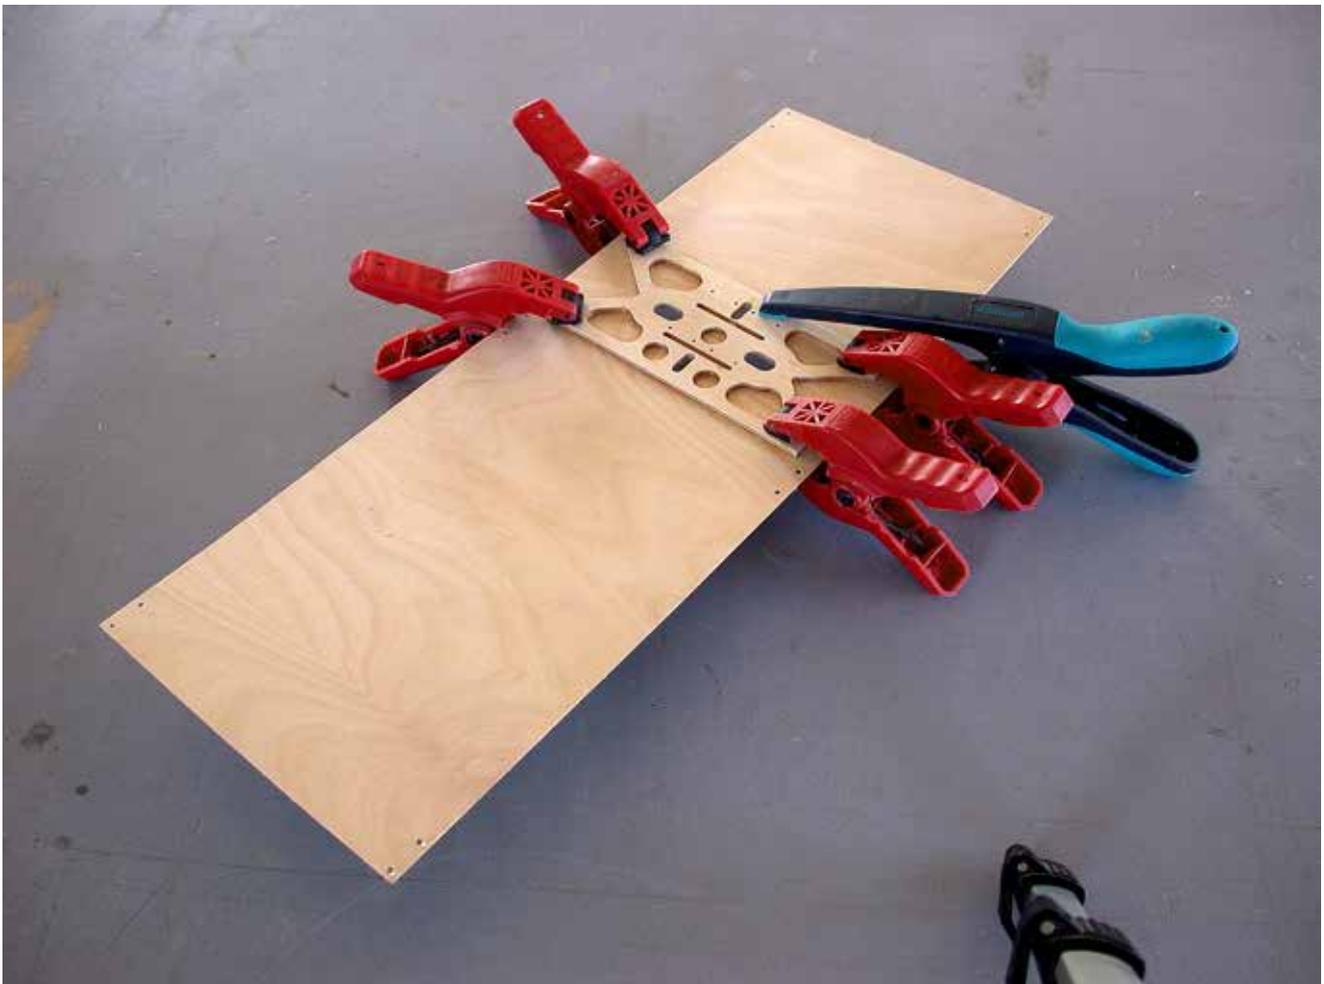





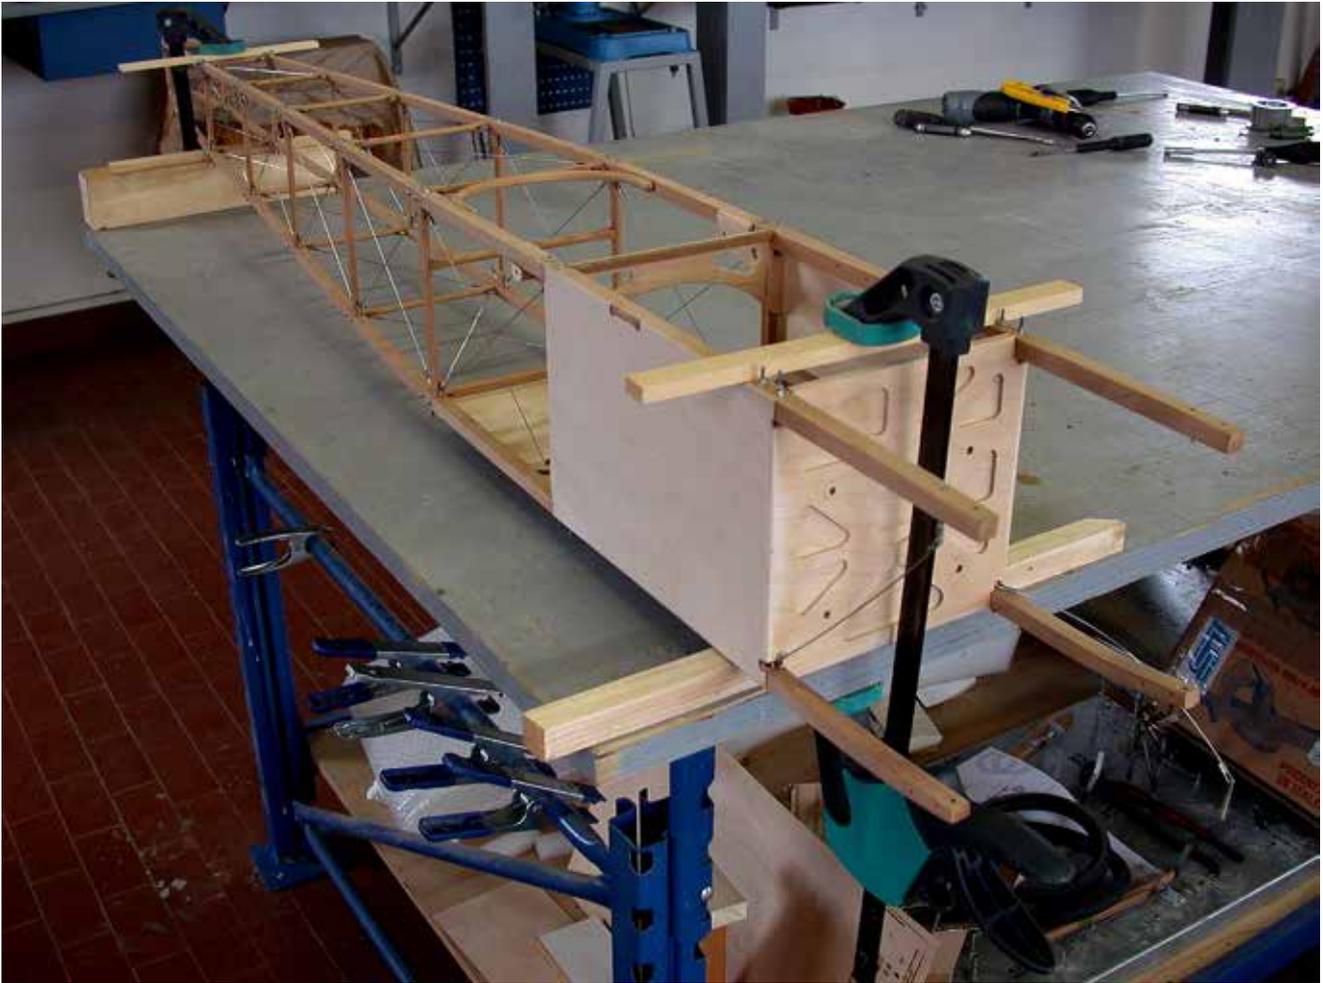

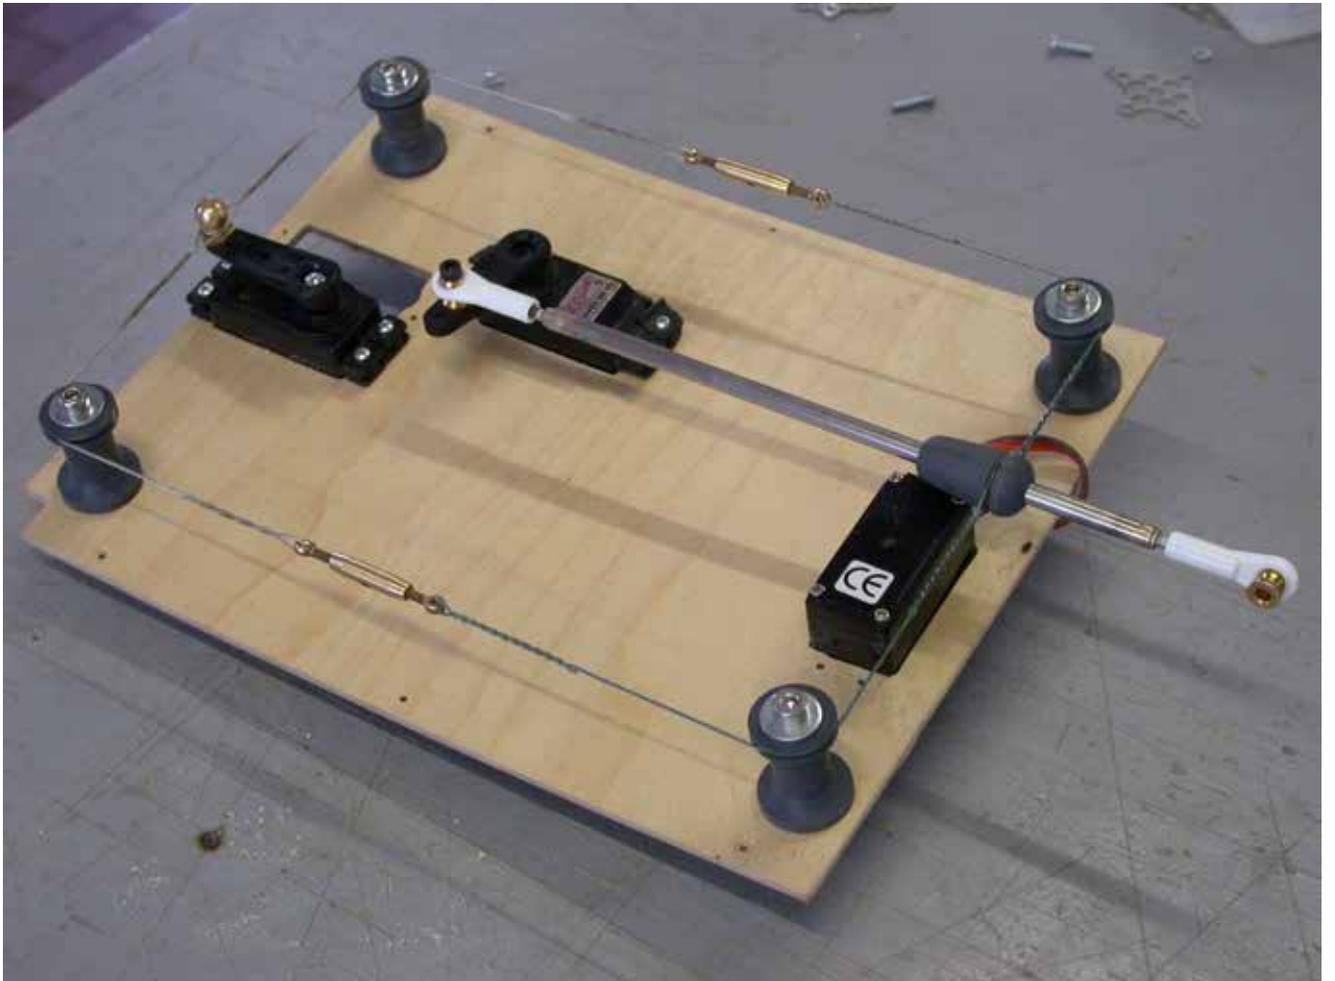


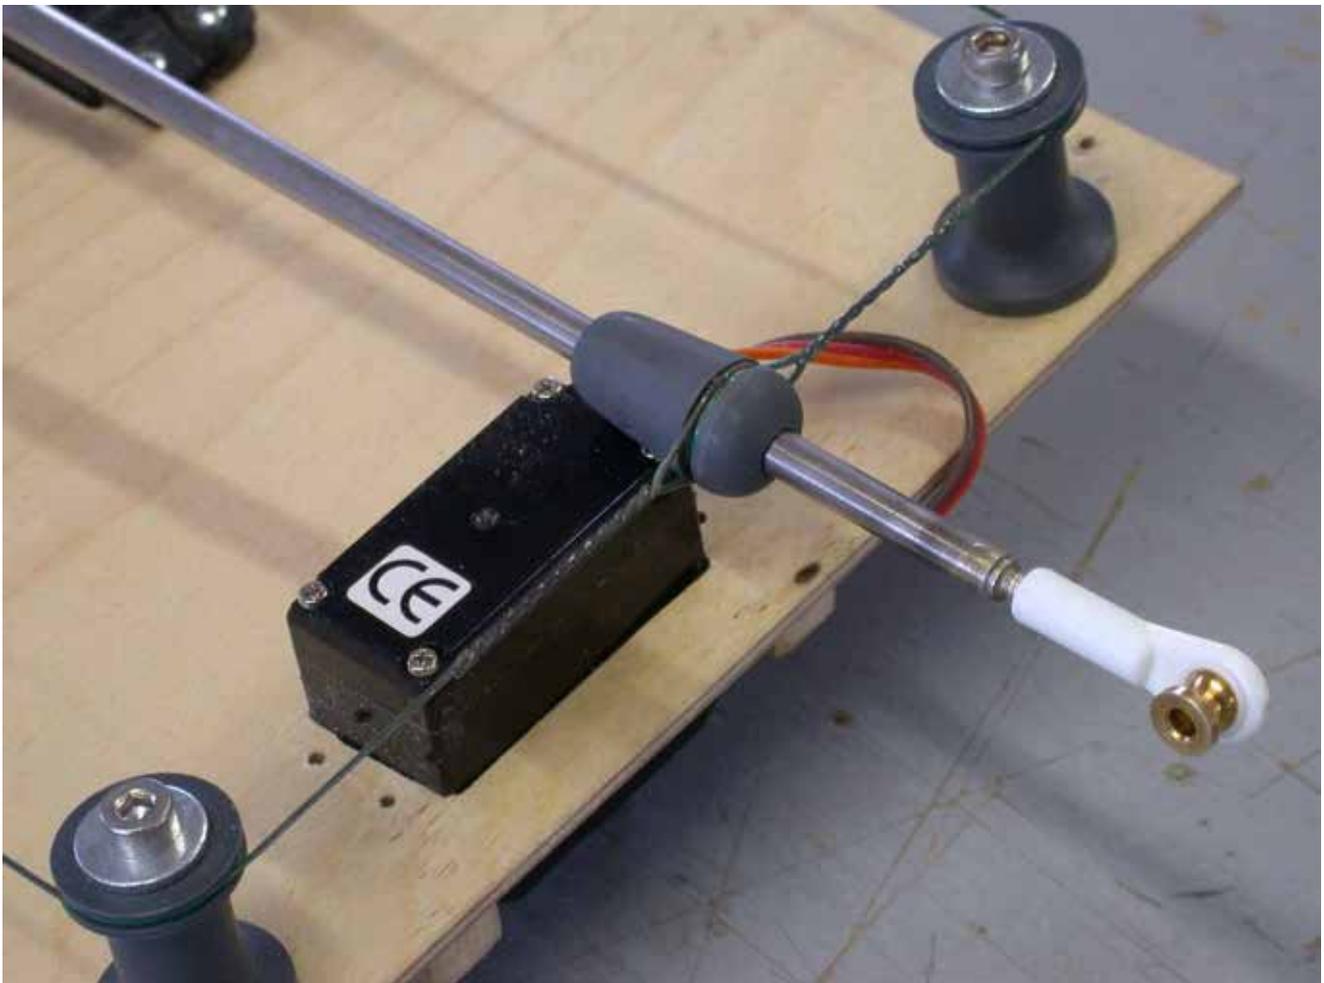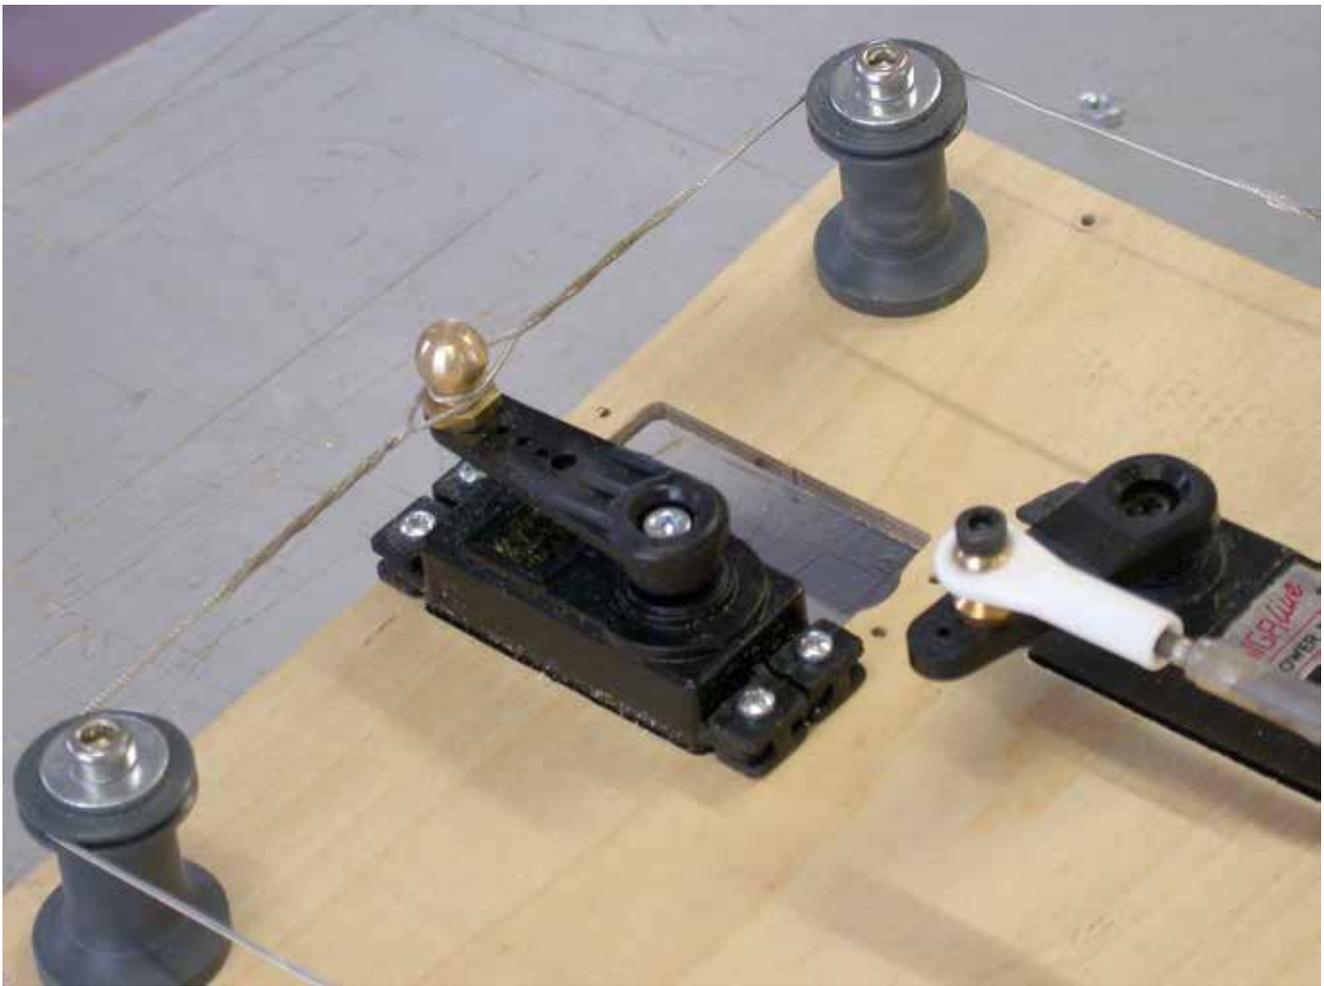



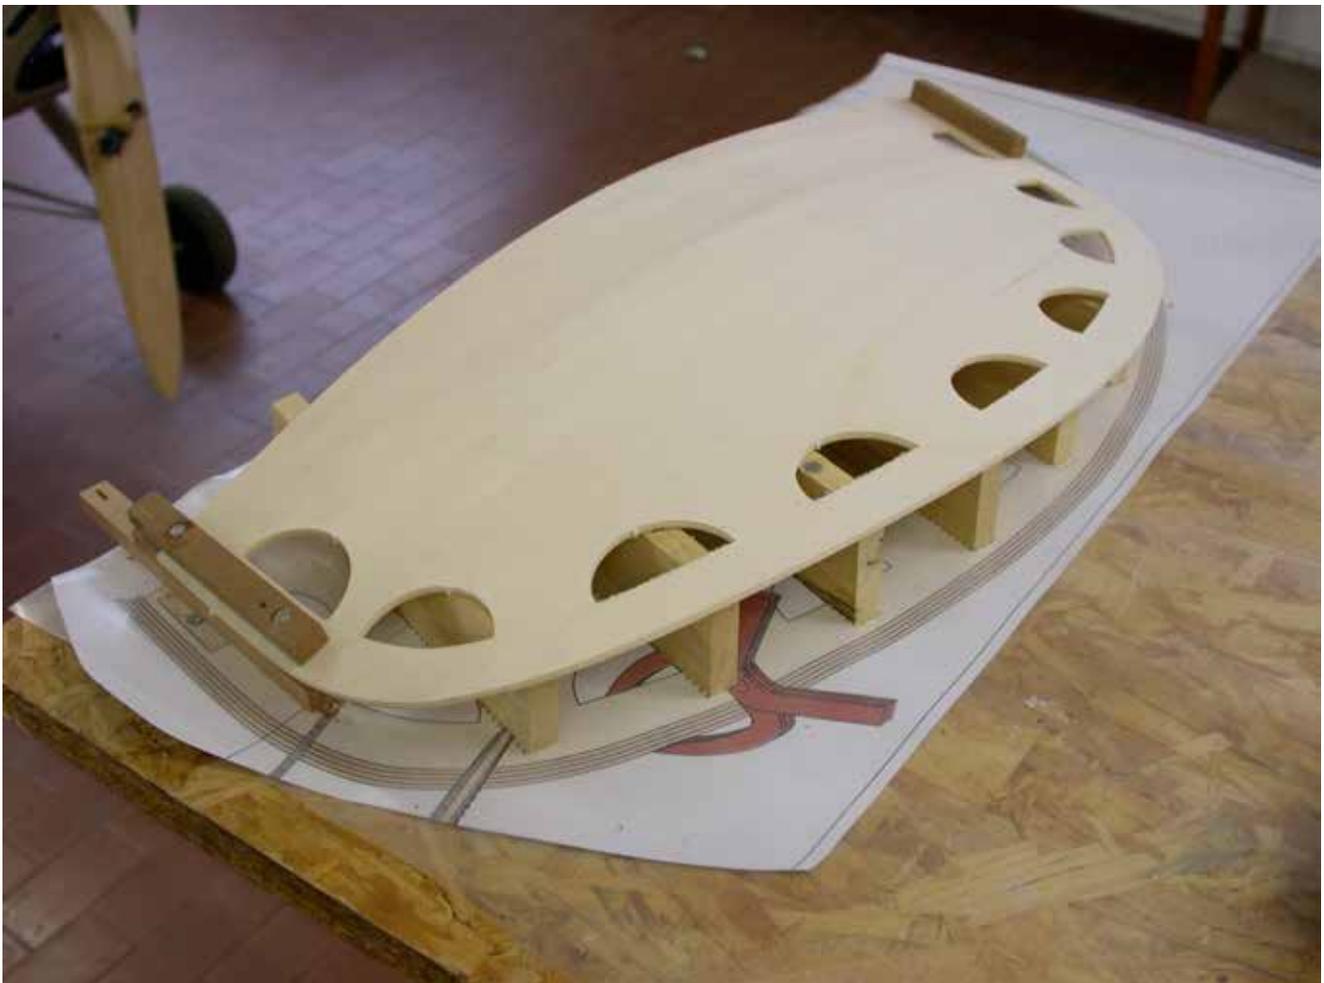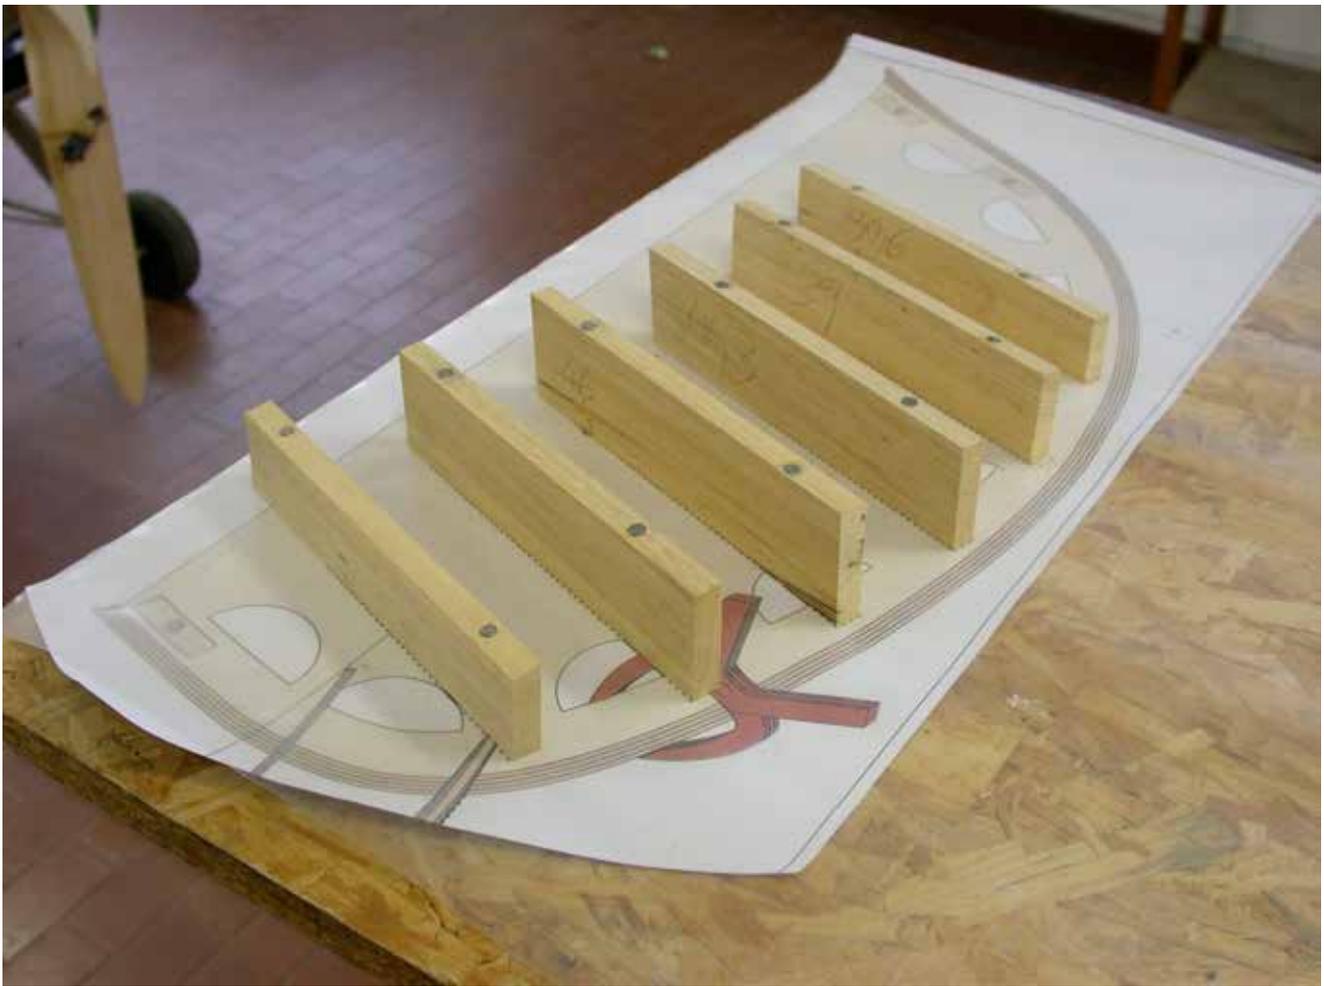




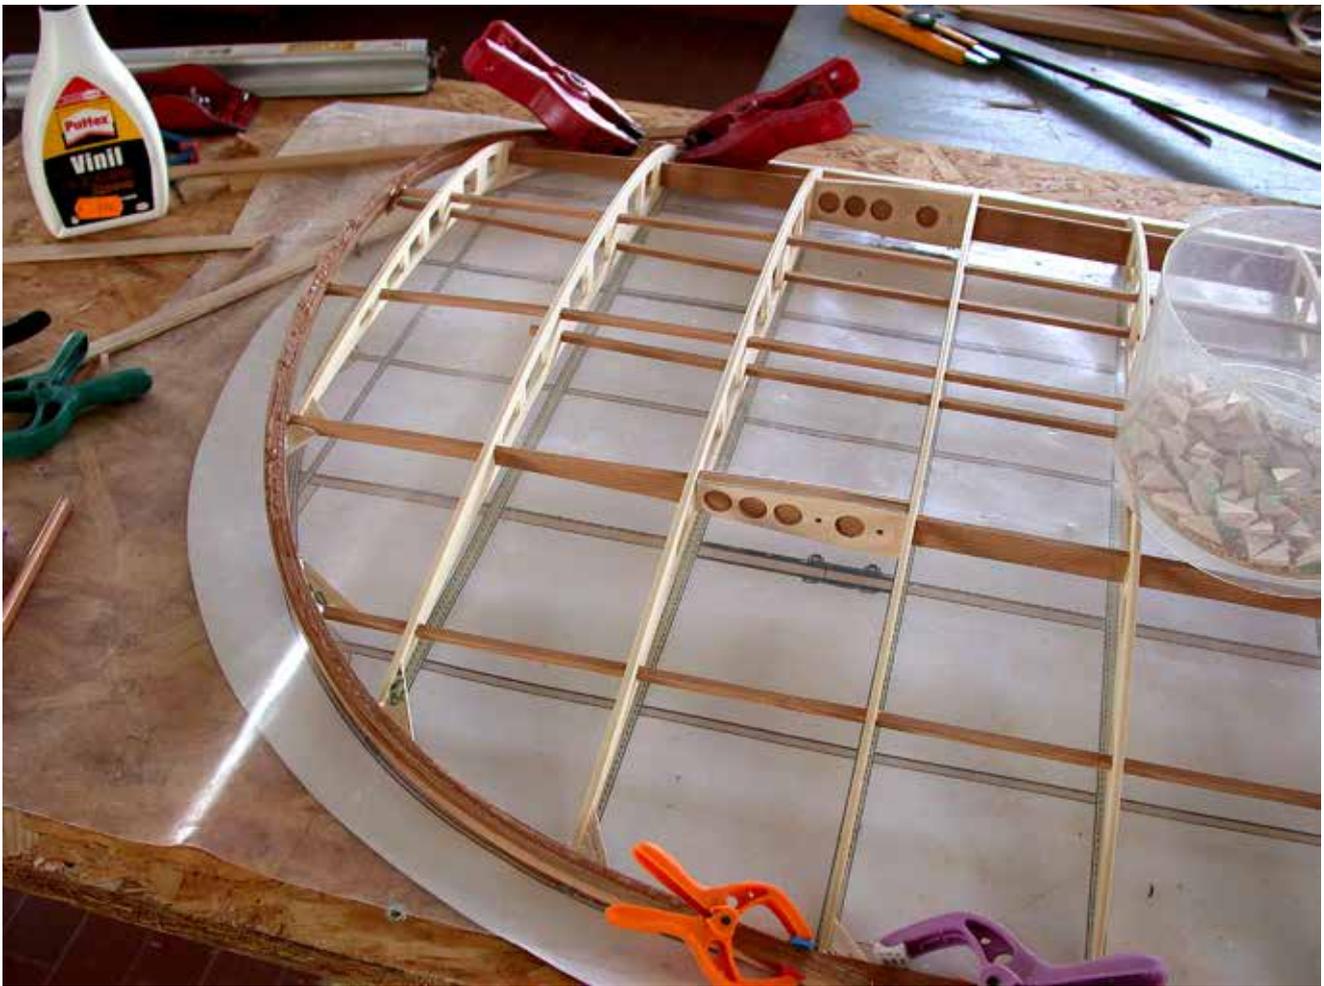






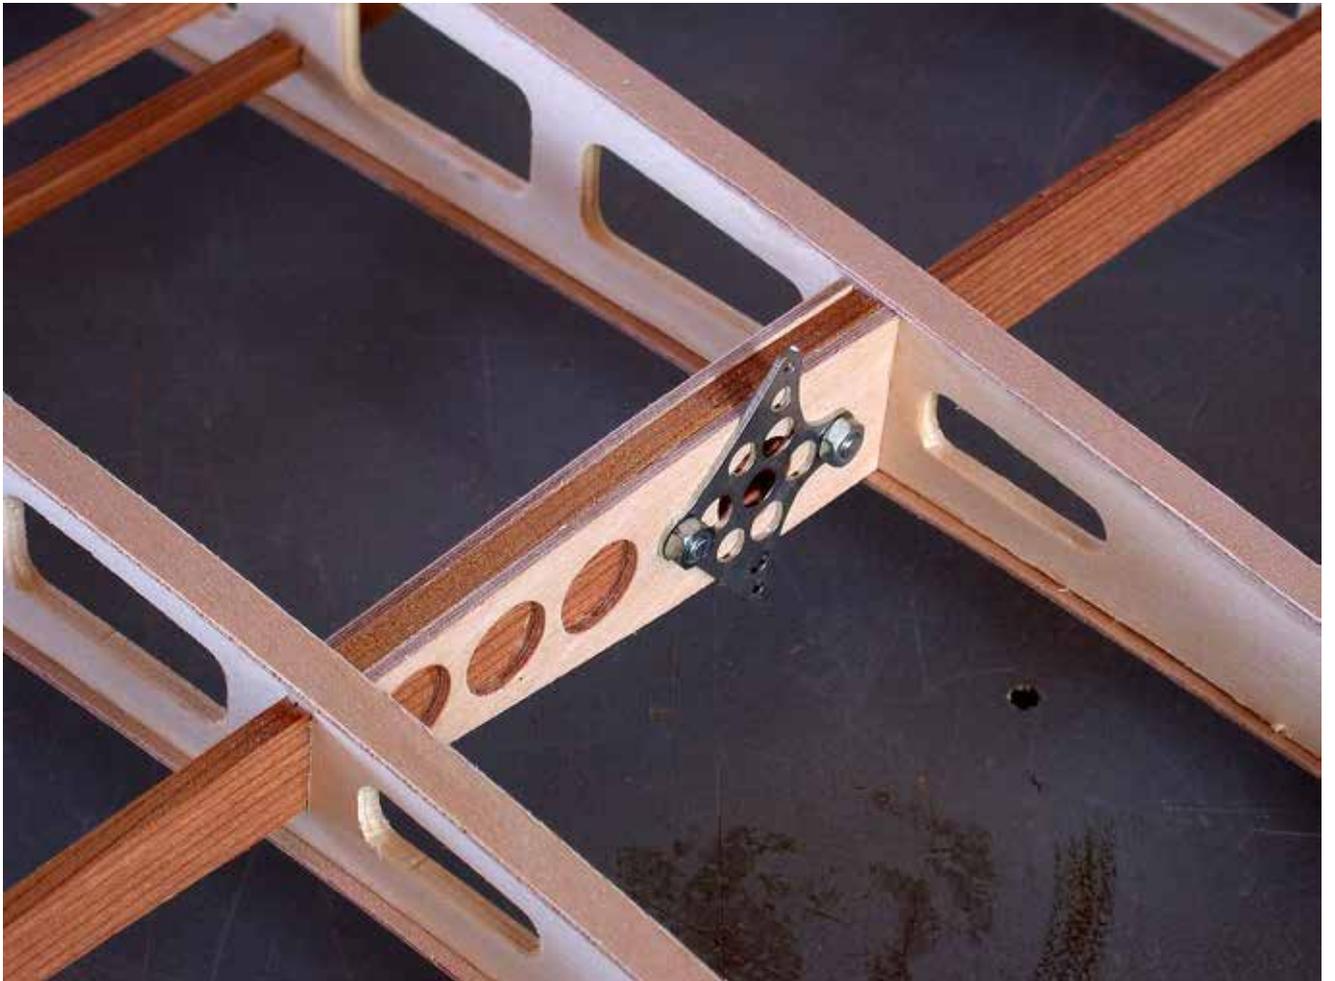







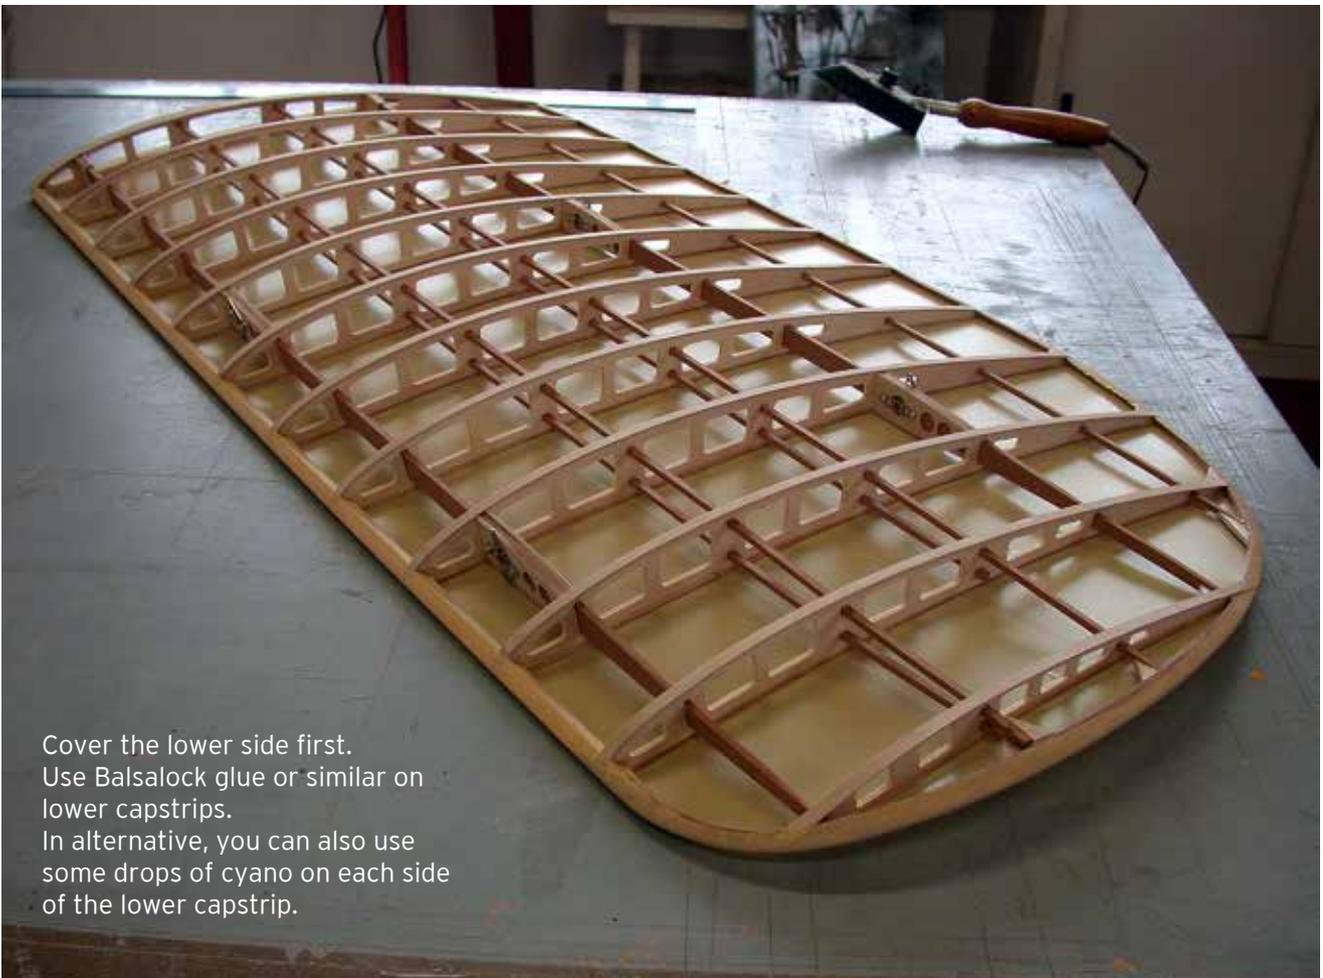


Cover the lower side first.
Use Balsalock glue or similar on
lower capstrips.
In alternative, you can also use
some drops of cyano on each side
of the lower capstrip.



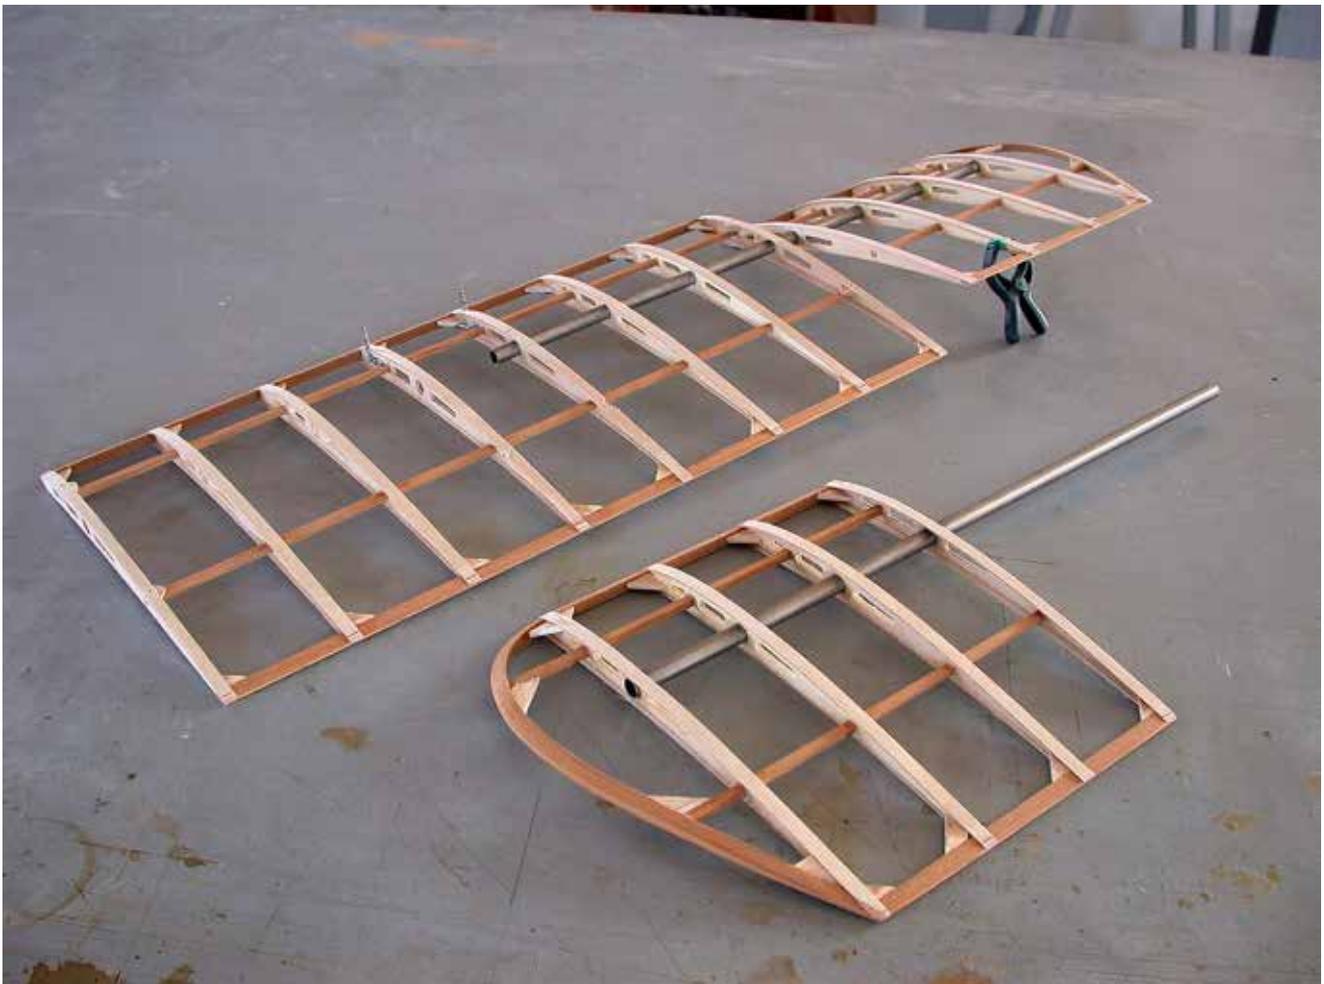

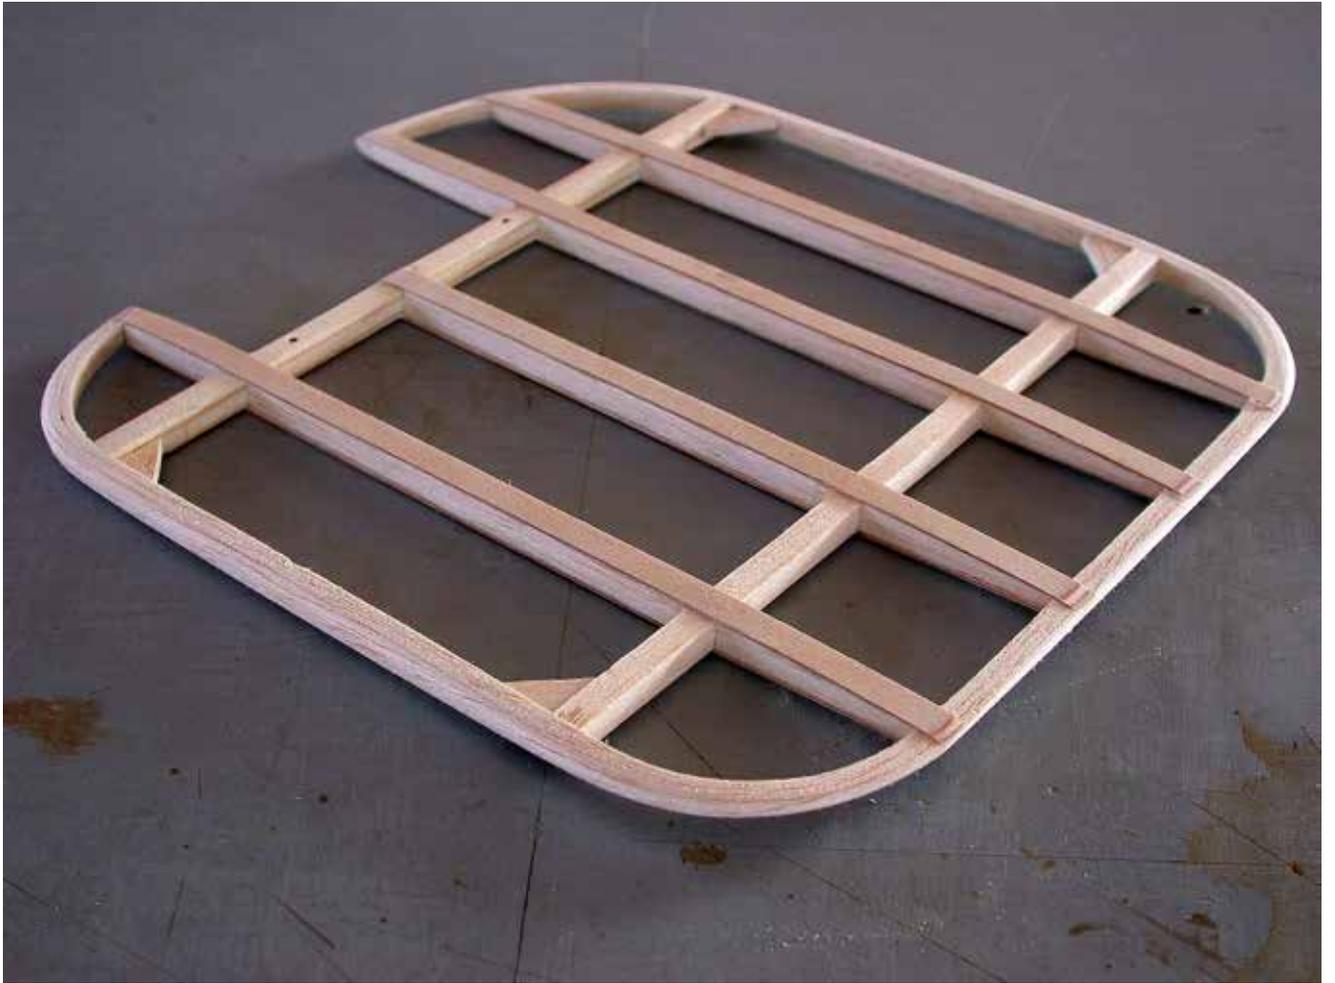

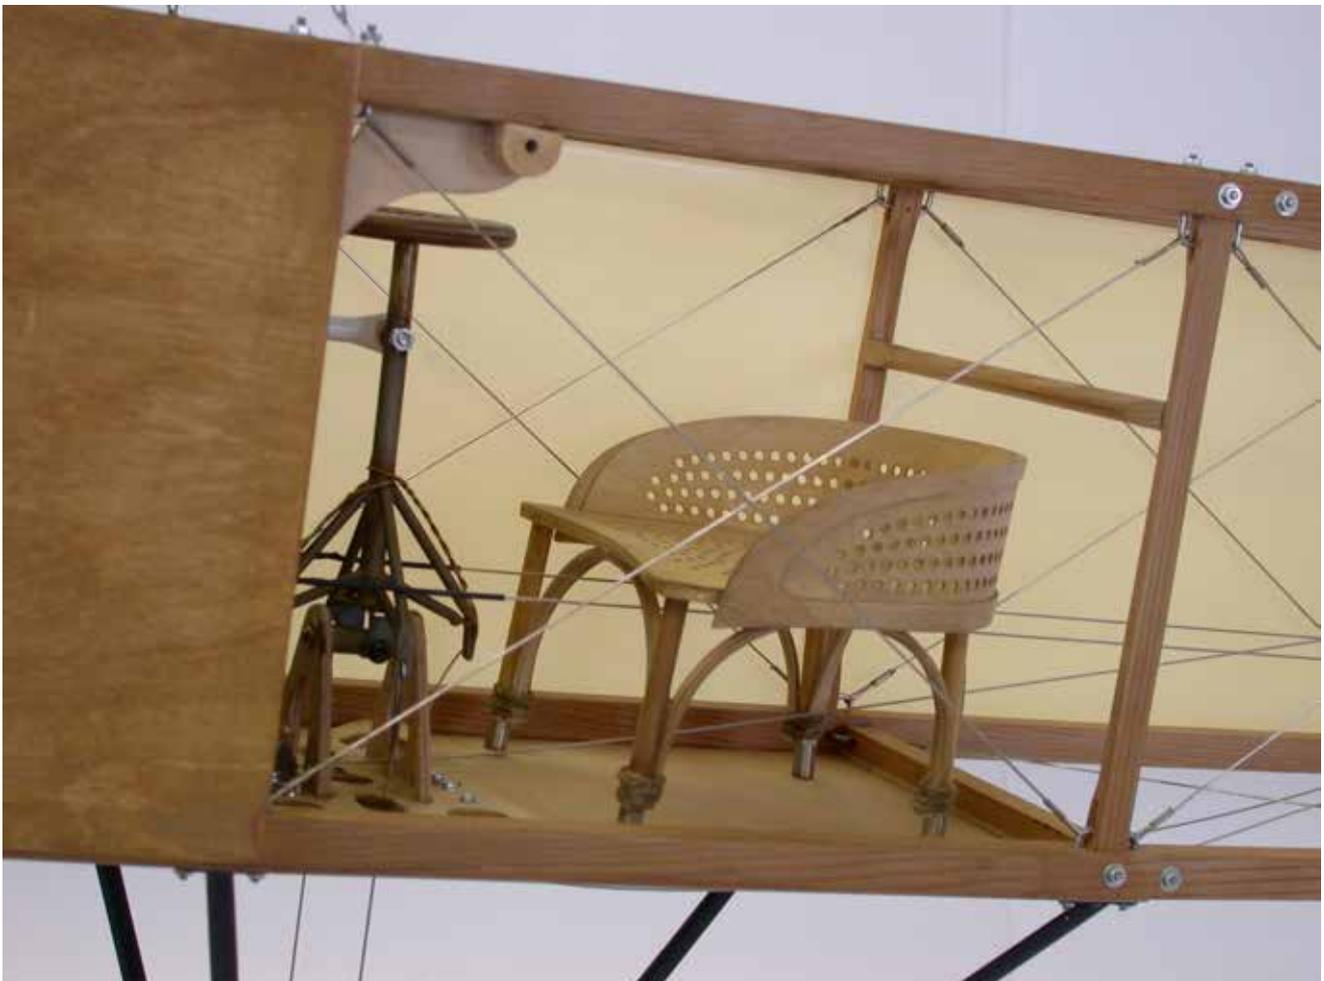
















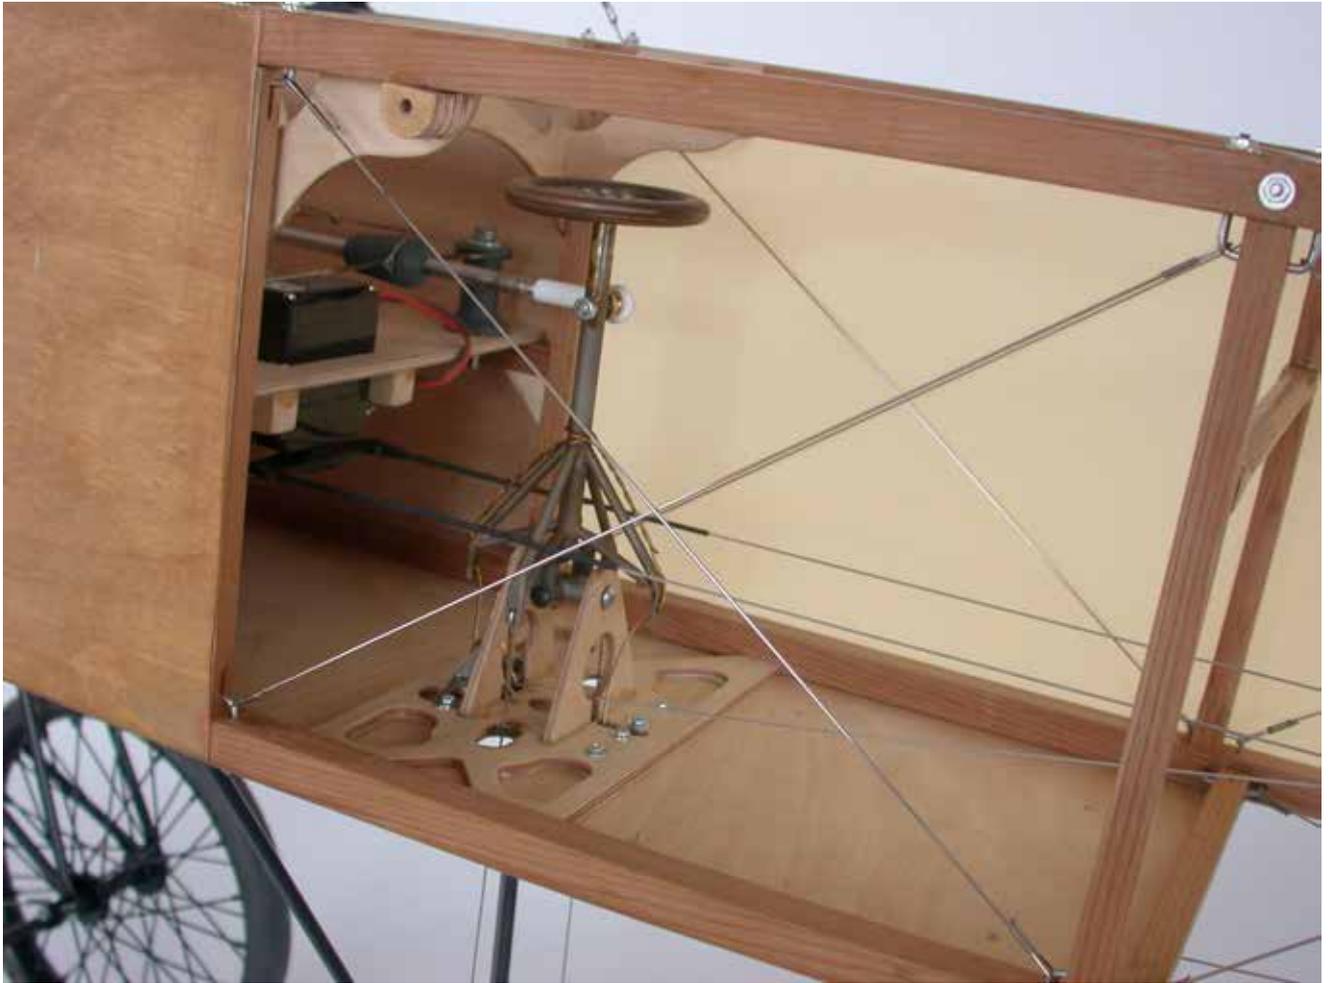






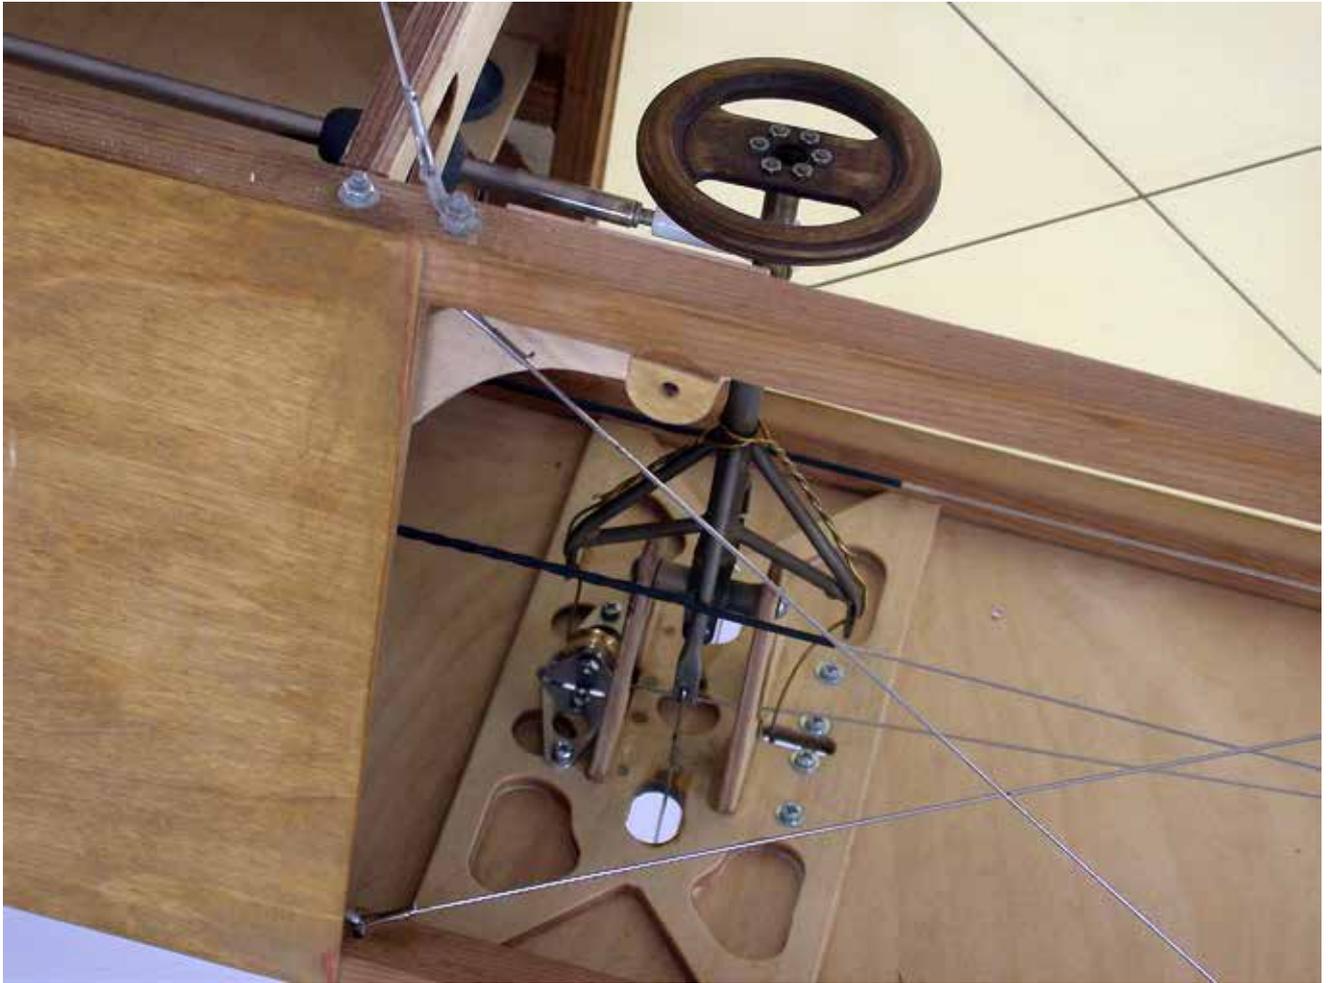








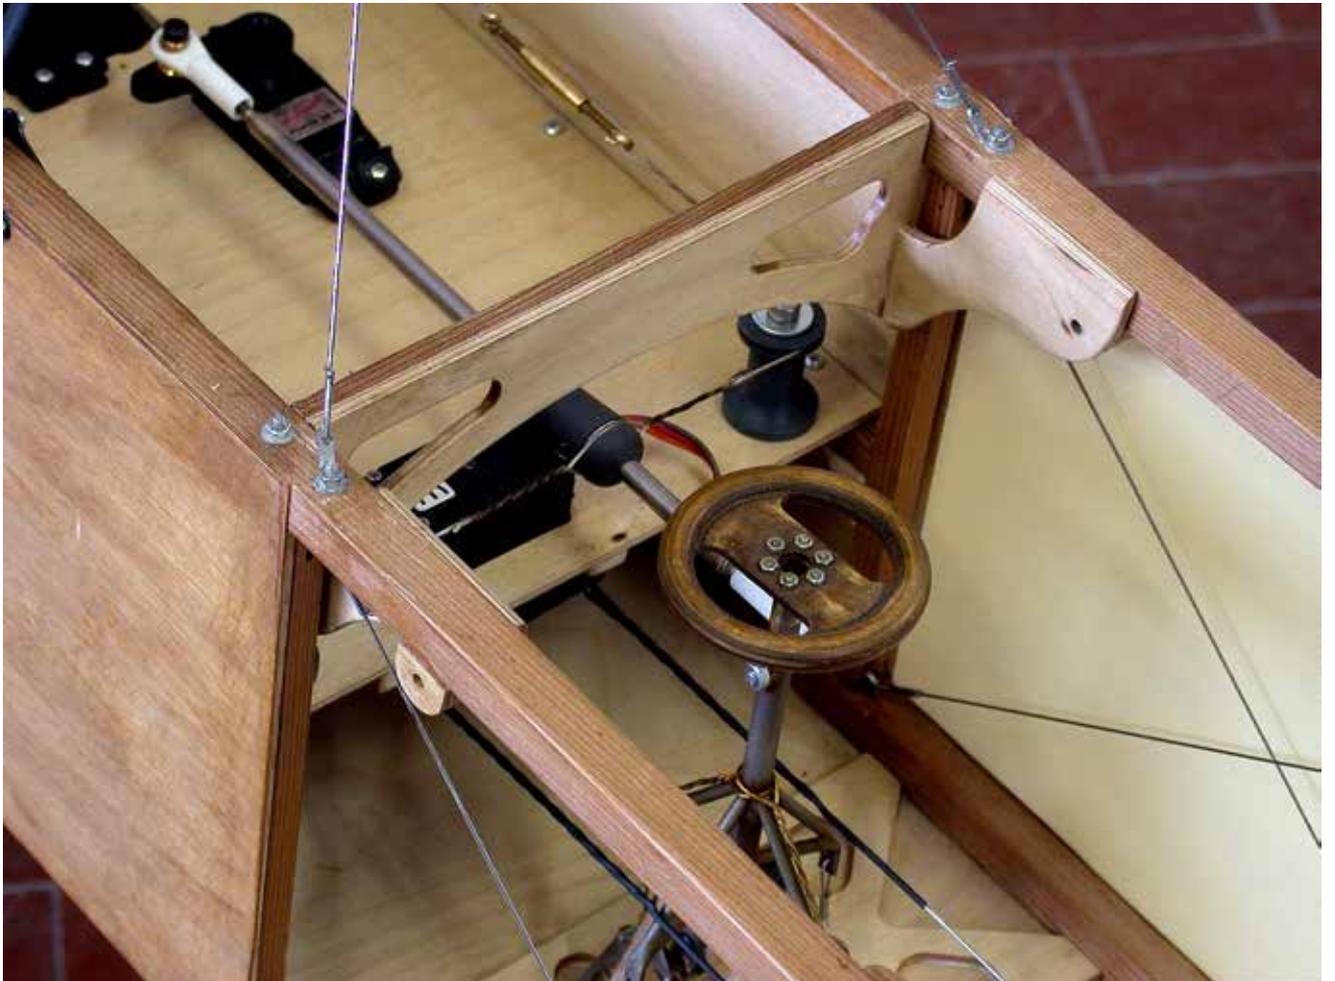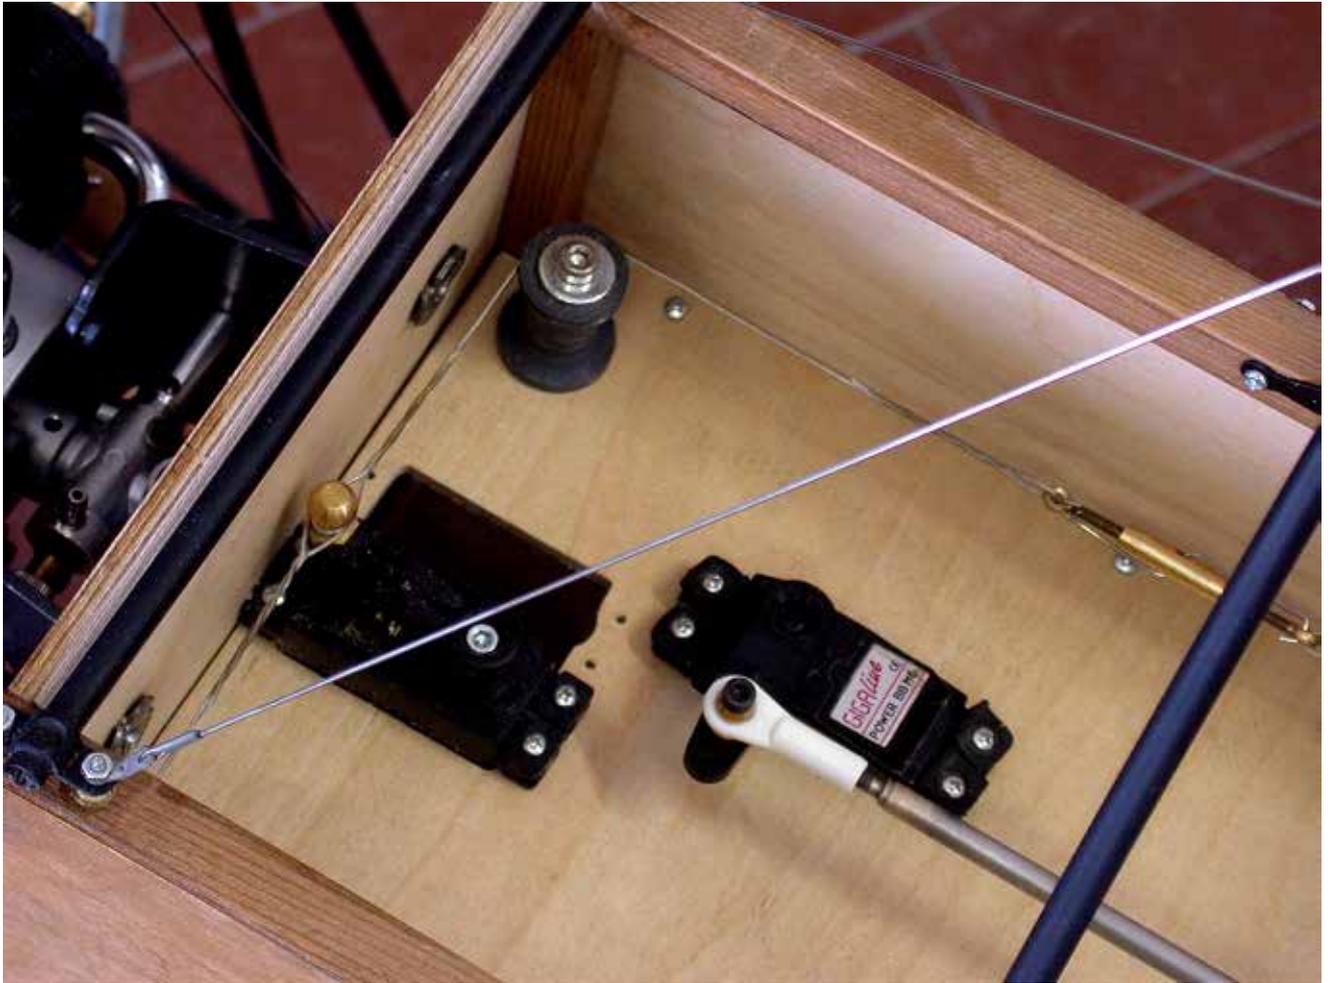

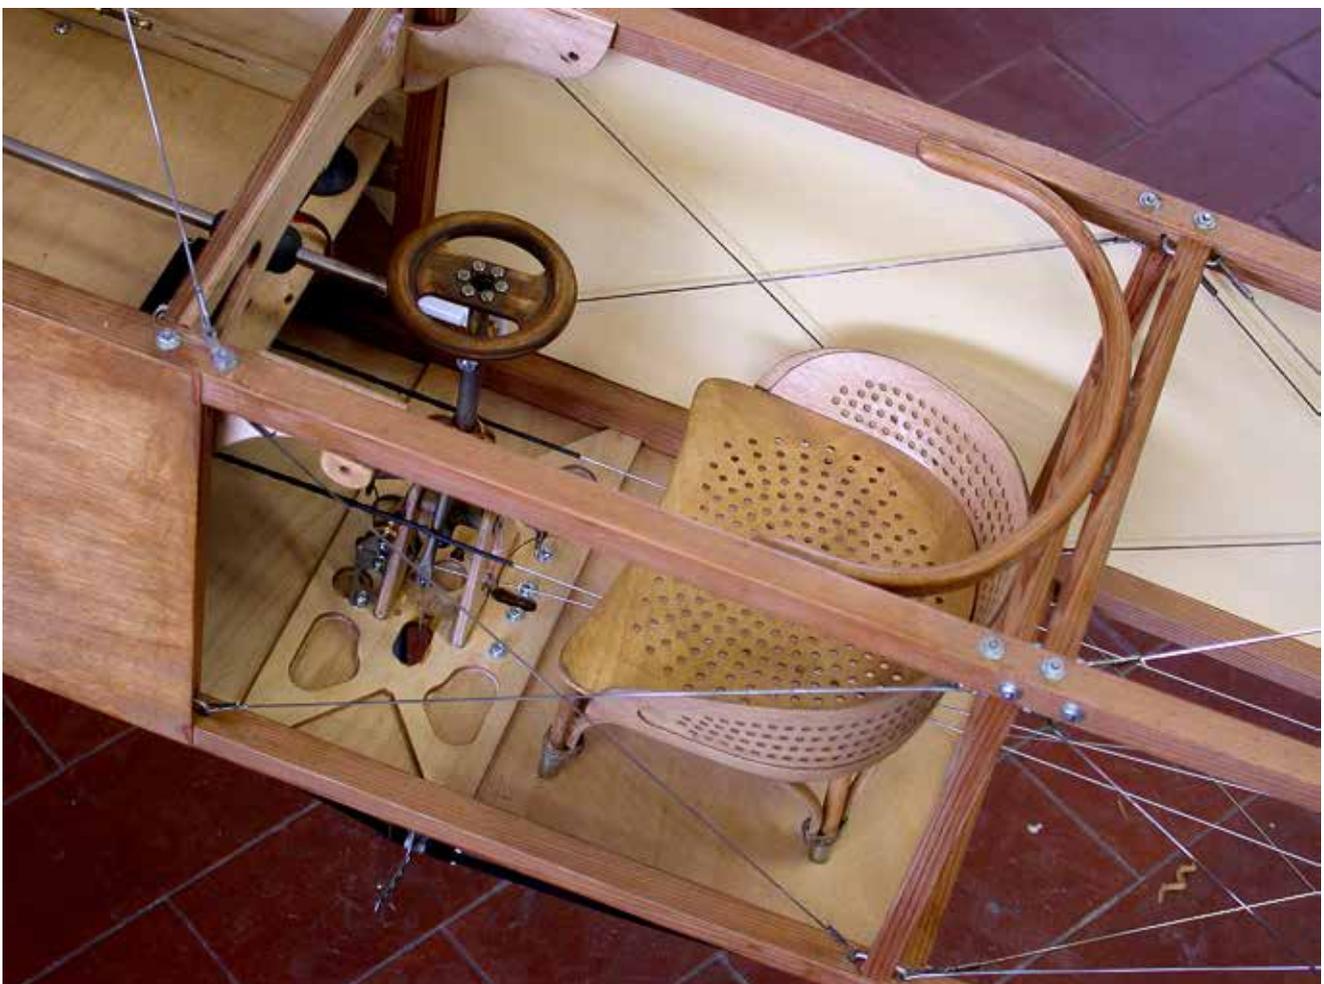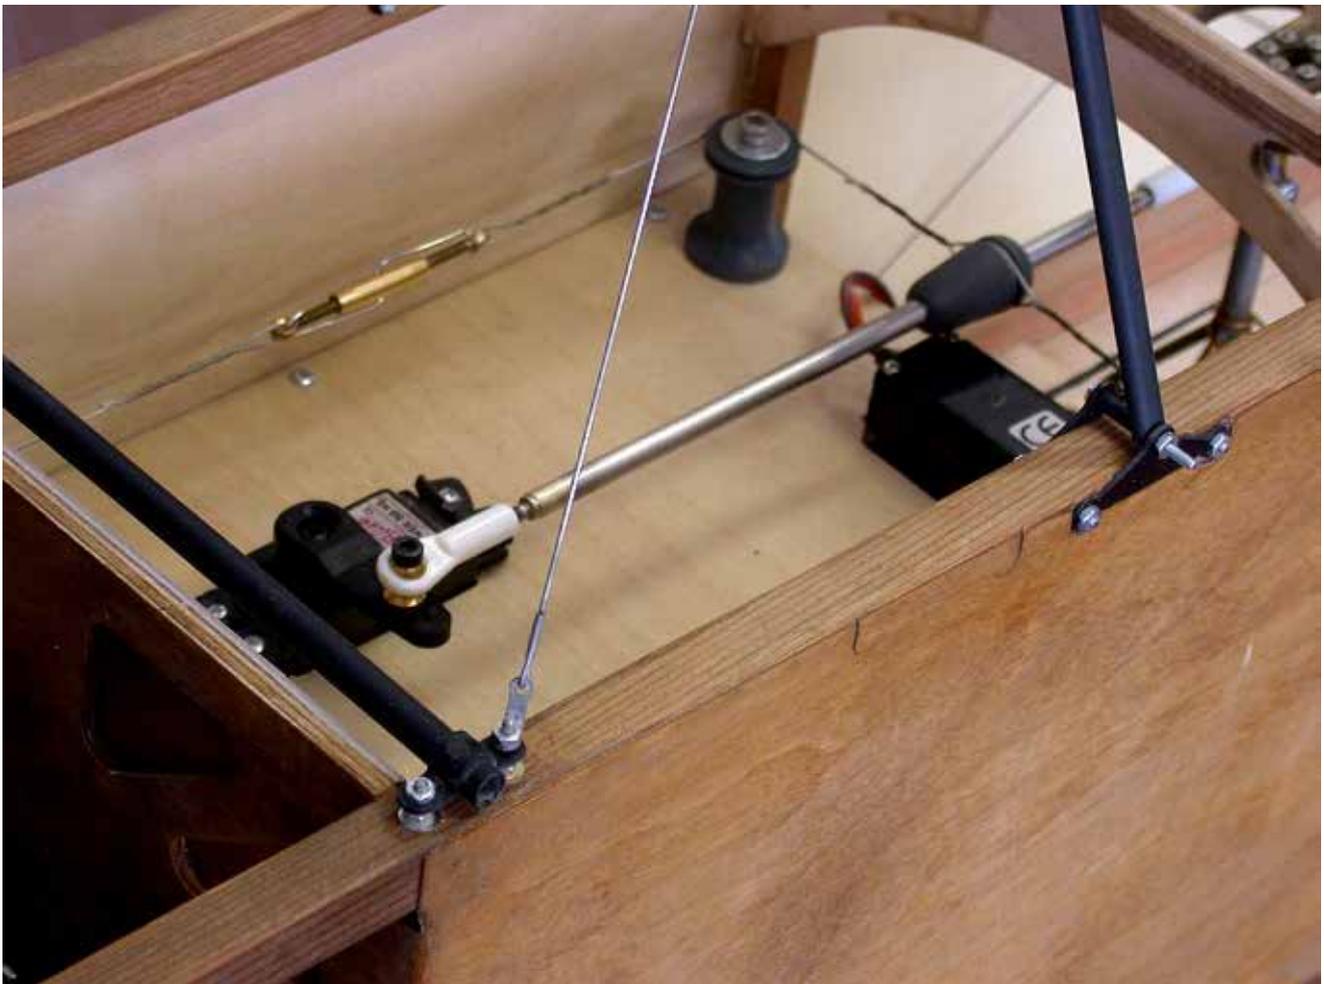

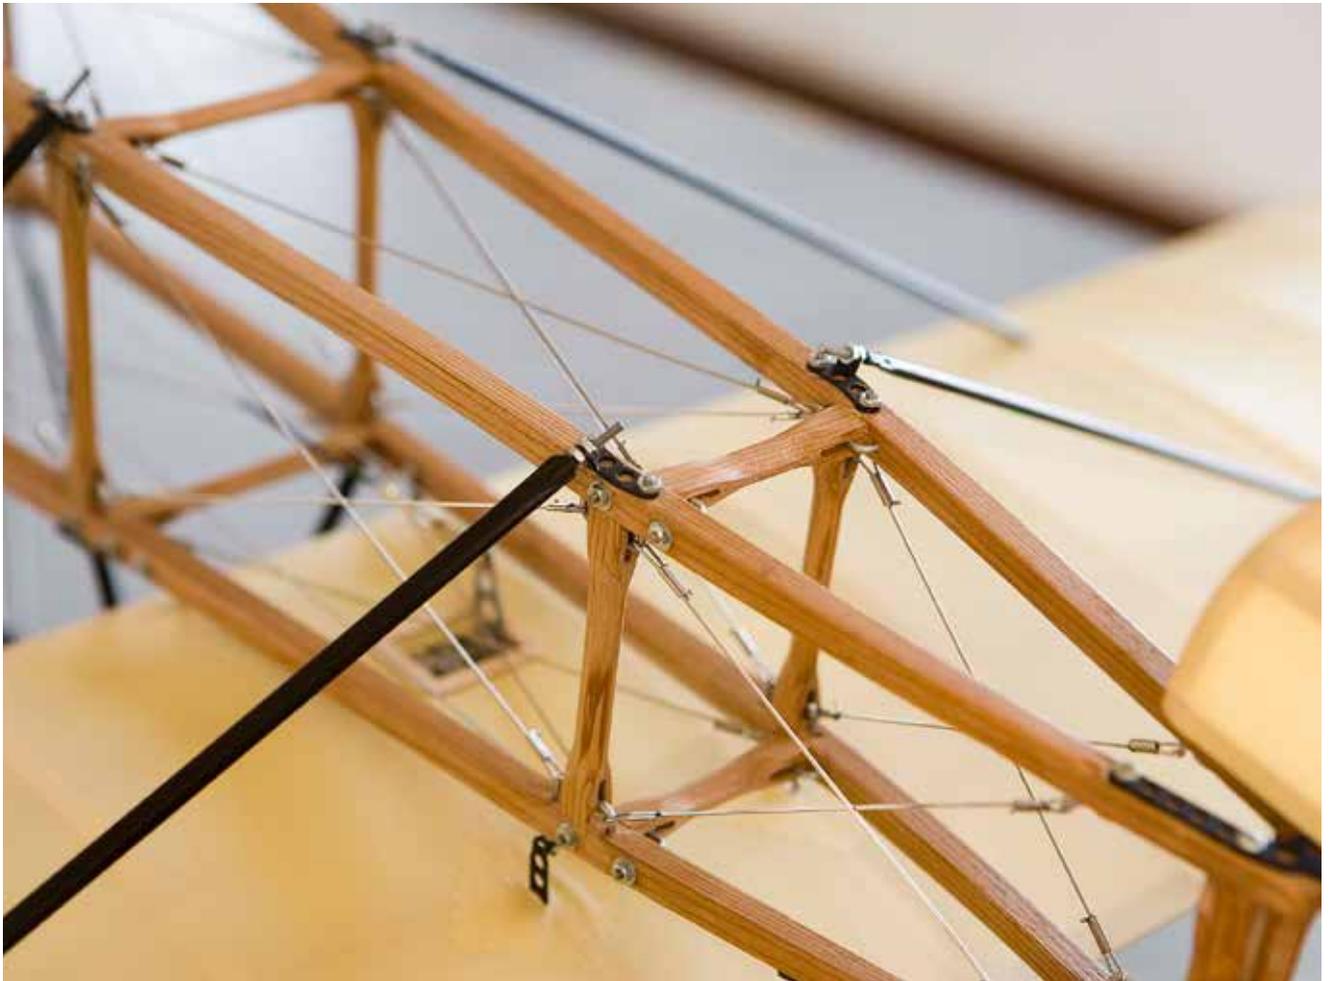

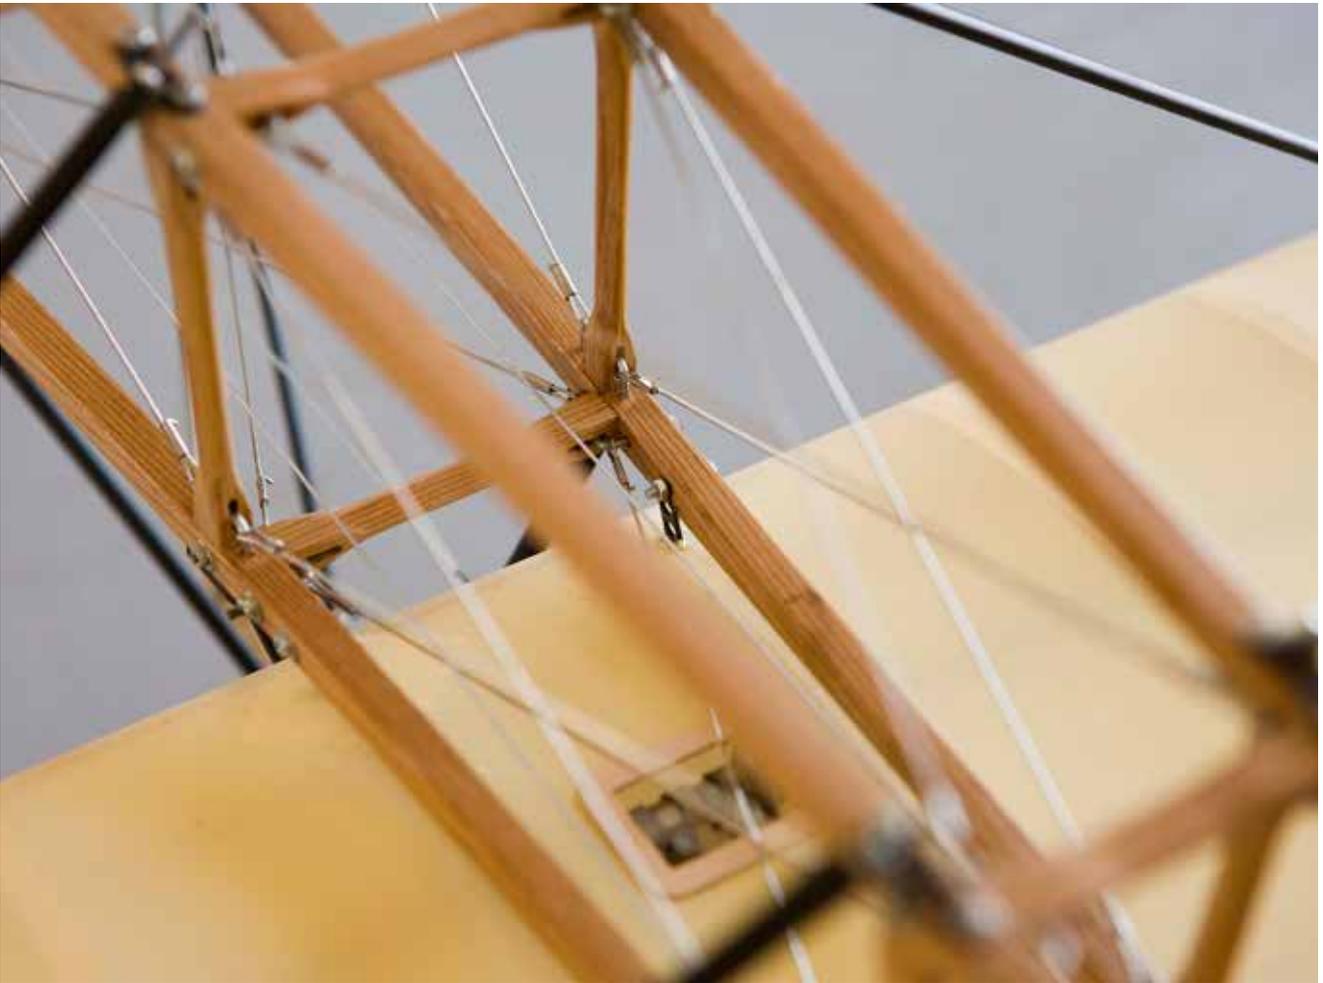


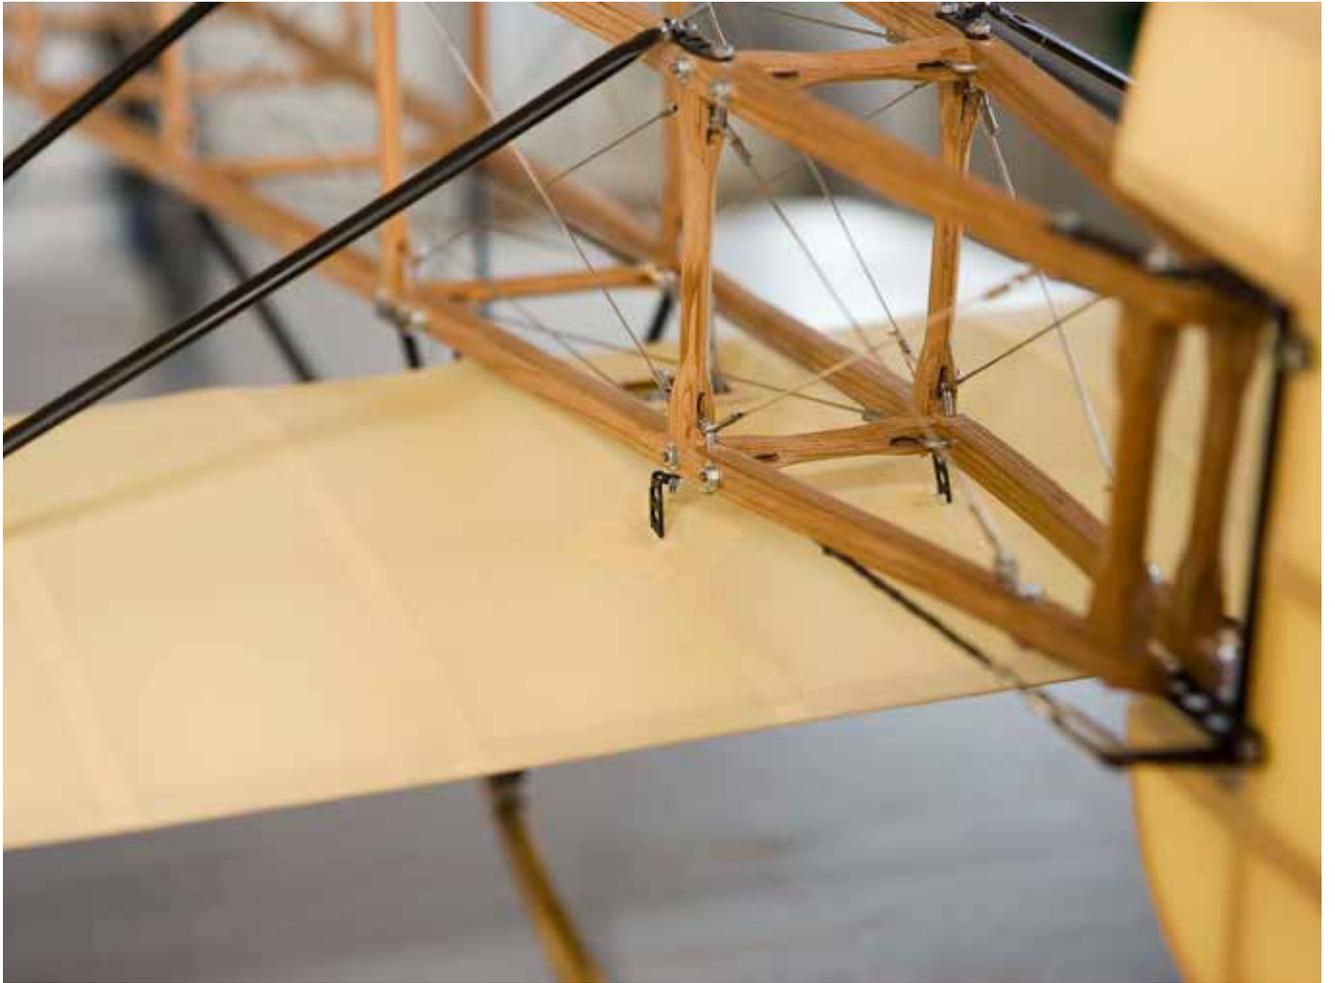







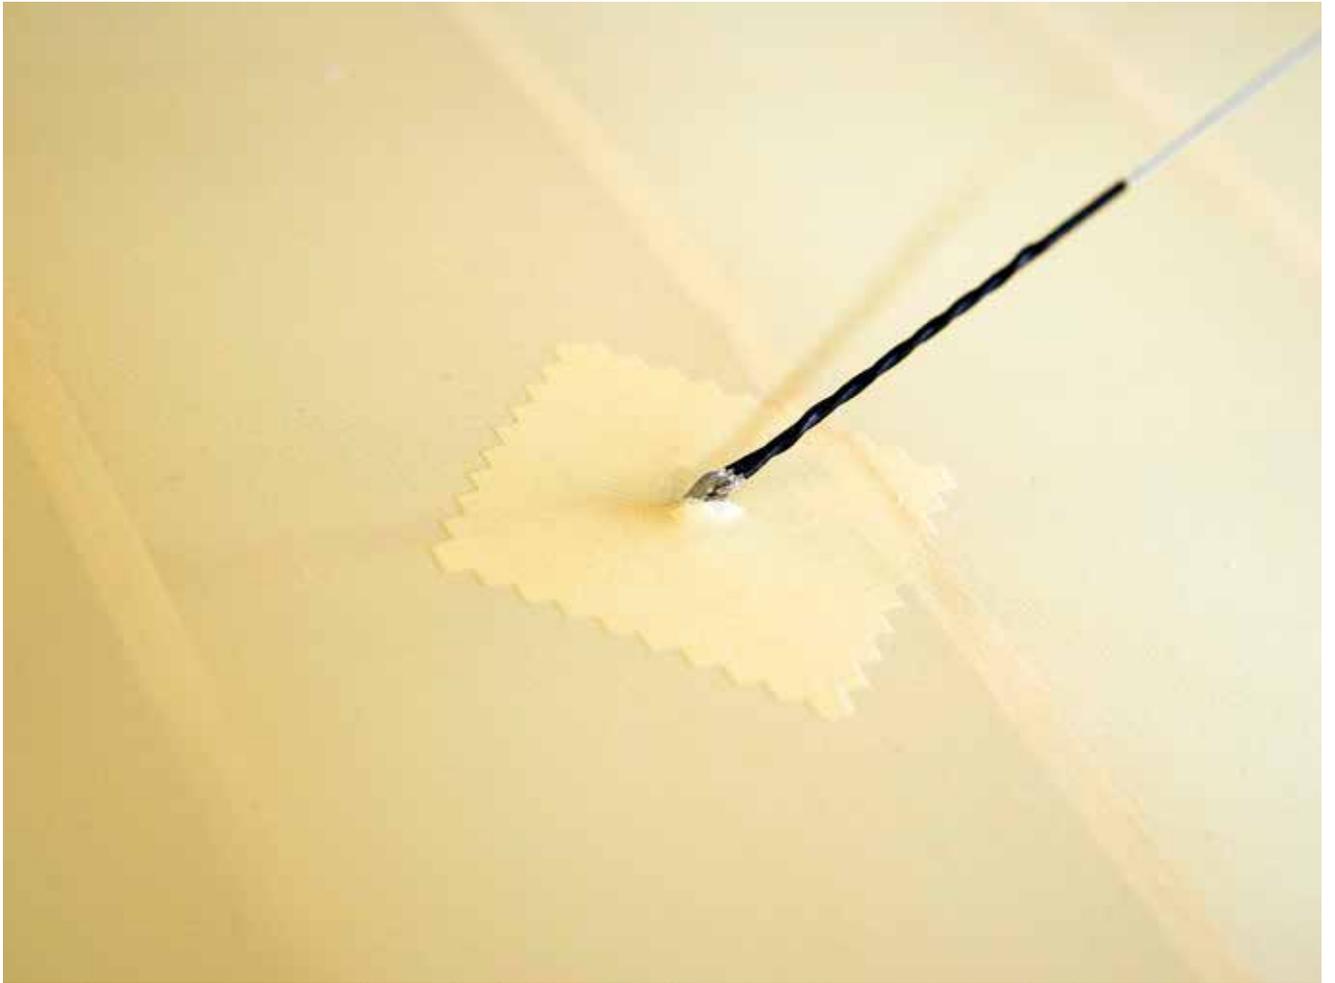











BLÉRIOT 1/4 SCALE

Wingspan: 217,5 cm (85,62 in)
Lenght: 189 cm (74,4 in)
Wing area: 96 sq/dm (10,33 sq/ft)
Weight: 5,5 Kg (12,1 lb)

Engine:
Saito FA-170 R3, Saito 200 R3, three cyl. four stroke radial

Projected and drawn by Paolo Severin - April 2008

www.paoloseverin.it

Paolo Severin srl
Via Decorati al Valor Civile 57a
35142 Padova - Italy
Laboratorio: Via Monfalcone 11 - Padova

Tel. 049 8800329 - Fax 049 8800354

email: paolo.severin@pallino.it

U.S. distributor:



www.vogelsang-aeroscale.com

Germany distributor:

